

---

# **EmETXe-i88U0**

**COM Express® Compact  
Type 6 CPU Module**

**User's Manual**  
**Version 1.0**



2015.10

---

## Revision History

Version	Date	Description
1.0	October, 2015	Initial release

---

---

<b>Preface</b>	iii
<b>Copyright Notice</b>	iii
<b>Declaration of Conformity</b>	iii
CE	iii
FCC Class A	iii
RoHS	iv
SVHC / REACH	iv
<b>Warning</b>	v
<b>Replacing the Lithium Battery</b>	v
<b>Technical Support</b>	v
<b>Warranty</b>	vi
<b>Chapter 1 - Introduction</b>	1
1.1 The Product	2
1.2 About This Manual	2
1.3 Specifications	3
1.4 Inside the Package	4
1.5 Ordering Information	4
1.5.1 Optional Accessories	4
1.6 The Installation Paths of CD Driver	5
<b>Chapter 2 - Board Overview</b>	7
2.1 What Is “COM Express®”?	8
2.2 Board Dimensions	9
2.3 Block Diagram	10
2.4 Connector Pin Definition	11
<b>Chapter 3 - Installation &amp; Maintenance</b>	15
3.1 Installing the CPU Module on Carrier Board	16
3.2 Installing the Heatsink	17

<b>Chapter 4 - BIOS</b>	<b>19</b>
<b>4.1 Main .....</b>	<b>20</b>
<b>4.2 Advanced.....</b>	<b>22</b>
4.2.1 CPU Configuration .....	23
4.2.2 Trusted Computing.....	24
4.2.3 ACPI Settings.....	25
4.2.4 AMT Configuration .....	26
4.2.5 Super IO Configuration.....	27
4.2.6 Hardware Monitor .....	29
4.2.7 S5 RTC wake Settings.....	30
4.2.8 SATA Configuration.....	31
4.2.9 CSM Configuration.....	32
4.2.10 USB Configuration .....	33
4.2.11 Intel(R) Ethernet Connection I218LM.....	35
<b>4.3 Chipset .....</b>	<b>37</b>
4.3.1 LCD Control .....	38
4.3.2 Memory Configuration .....	39
4.3.3 PCI Express Configuration .....	40
4.3.4 USB Configuration .....	42
4.3.5 HDAC Configuration.....	43
4.3.6 LAN Configuration.....	44
<b>4.4 Security .....</b>	<b>45</b>
<b>4.5 Boot .....</b>	<b>46</b>
<b>4.6 Save &amp; Exit.....</b>	<b>47</b>
<b>Appendix</b>	<b>49</b>
<b>Appendix A: I/O Port Address Map .....</b>	<b>50</b>
<b>Appendix B: BIOS Memory Mapping .....</b>	<b>53</b>
<b>Appendix C: Interrupt Request Lines (IRQ) .....</b>	<b>55</b>
<b>Appendix D: Watchdog Timer (WDT) Setting.....</b>	<b>56</b>
<b>Appendix E: Digital I/O Setting.....</b>	<b>58</b>

## Copyright Notice

All Rights Reserved.

The information in this document is subject to change without prior notice in order to improve the reliability, design and function. It does not represent a commitment on the part of the manufacturer.

Under no circumstances will the manufacturer be liable for any direct, indirect, special, incidental, or consequential damages arising from the use or inability to use the product or documentation, even if advised of the possibility of such damages.

This document contains proprietary information protected by copyright. All rights are reserved. No part of this manual may be reproduced by any mechanical, electronic, or other means in any form without prior written permission of the manufacturer.

## Declaration of Conformity

### CE

The CE symbol on your product indicates that it is in compliance with the directives of the Union European (EU). A Certificate of Compliance is available by contacting Technical Support.

This product has passed the CE test for environmental specifications when shielded cables are used for external wiring. We recommend the use of shielded cables. This kind of cable is available from ARBOR. Please contact your local supplier for ordering information.

This product has passed the CE test for environmental specifications. Test conditions for passing included the equipment being operated within an industrial enclosure. In order to protect the product from being damaged by ESD (Electrostatic Discharge) and EMI leakage, we strongly recommend the use of CE-compliant industrial enclosure products.

### Warning

This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

## FCC Class A

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1)This device may not cause harmful interference, and
- (2)This device must accept any interference received, including interference that may cause undesired operation.

**NOTE:**

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

**RoHS**

ARBOR Technology Corp. certifies that all components in its products are in compliance and conform to the European Union's Restriction of Use of Hazardous Substances in Electrical and Electronic Equipment (RoHS) Directive 2002/95/EC.

The above mentioned directive was published on 2/13/2003. The main purpose of the directive is to prohibit the use of lead, mercury, cadmium, hexavalent chromium, polybrominated biphenyls (PBB), and polybrominated diphenyl ethers (PBDE) in electrical and electronic products. Member states of the EU are to enforce by 7/1/2006.

ARBOR Technology Corp. hereby states that the listed products do not contain unintentional additions of lead, mercury, hex chrome, PBB or PBDB that exceed a maximum concentration value of 0.1% by weight or for cadmium exceed 0.01% by weight, per homogenous material. Homogenous material is defined as a substance or mixture of substances with uniform composition (such as solders, resins, plating, etc.). Lead-free solder is used for all terminations (Sn(96-96.5%), Ag(3.0-3.5%) and Cu(0.5%)).

**SVHC / REACH**

To minimize the environmental impact and take more responsibility to the earth we live, Arbor hereby confirms all products comply with the restriction of SVHC (Substances of Very High Concern) in (EC) 1907/2006 (REACH --Registration, Evaluation, Authorization, and Restriction of Chemicals) regulated by the European Union.

All substances listed in SVHC < 0.1 % by weight (1000 ppm)

---

## Warning

Single Board Computers and their components contain very delicate Integrated Circuits (IC). To protect the Single Board Computer and its components against damage from static electricity, you should always follow the following precautions when handling it :

1. Disconnect your Single Board Computer from the power source when you want to work on the inside.
2. Hold the board by the edges and try not to touch the IC chips, leads or circuitry.
3. Use a grounded wrist strap when handling computer components.
4. Place components on a grounded antistatic pad or on the bag that comes with the Single Board Computer, whenever components are separated from the system.

## Replacing the Lithium Battery

Incorrect replacement of the lithium battery may lead to a risk of explosion.

The lithium battery must be replaced with an identical battery or a battery type recommended by the manufacturer.

Do not throw lithium batteries into the trash-can. It must be disposed of in accordance with local regulations concerning special waste.

## Technical Support

If you have any technical difficulties, please consult the user's manual first at:

<http://www.arbor.com.tw>

Please do not hesitate to call or e-mail our customer service when you still cannot find out the answer.

<http://www.arbor.com.tw>

E-mail:[info@arbor.com.tw](mailto:info@arbor.com.tw)

## **Warranty**

This product is warranted to be in good working order for a period of two years from the date of purchase. Should this product fail to be in good working order at any time during this period, we will, at our option, replace or repair it at no additional charge except as set forth in the following terms. This warranty does not apply to products damaged by misuse, modifications, accident or disaster.

Vendor assumes no liability for any damages, lost profits, lost savings or any other incidental or consequential damage resulting from the use, misuse of, or inability to use this product. Vendor will not be liable for any claim made by any other related party.

Vendors disclaim all other warranties, either expressed or implied, including but not limited to implied warranties of merchantability and fitness for a particular purpose, with respect to the hardware, the accompanying product's manual(s) and written materials, and any accompanying hardware. This limited warranty gives you specific legal rights.

Return authorization must be obtained from the vendor before returned merchandise will be accepted. Authorization can be obtained by calling or faxing the vendor and requesting a Return Merchandise Authorization (RMA) number. Returned goods should always be accompanied by a clear problem description.

# Chapter 1

## Introduction

## 1.1 The Product

The EmETXe-i88U0 is a space-conscious CPU board of 95 mm x 95 mm to take up only small footprint in your system. By the architecture of Type 6, the board has two high-performance connectors to promise stable data passing rate. The soldered onboard 5<sup>th</sup> Generation Intel® Core™ processor, along with integrated Intel® Graphics chipset, bring LVDS, and DDI solution for most monitors or LCD video panels.

For system configuration, the board is supported by AMI UEFI BIOS. EmETXe-i88U0 is an ideal choice for some demanding industrial control and data communications by its significant processing performance, low power consumption and these features:

- Soldered onboard 5<sup>th</sup> Generation Intel® Core™ processor
- Integrated Gigabit Ethernet
- Dual-channel 24-bit LVDS, and 2 x DDI ports
- 3 independent displays Supported
- Intel VT-d Technology Supported
- Wide Range Operating Temp.: -40 ~ 85°C

## 1.2 About This Manual

This user's manual provides general information and installation instructions about the product. This user's manual is intended for experienced users and integrators with hardware knowledge of personal computers. If you are not sure about any description in this booklet. Please consult your vendor before further handling.

## 1.3 Specifications

System	
CPU	5 <sup>th</sup> Generation Intel® Core™ Processor i7-5650U 2.2GHz
Memory	1 x DDR3L SO-DIMM socket, supporting up to 8GB 1600MT/s SDRAM
BIOS	AMI® UEFI BIOS
Watchdog Timer	1~255 levels reset
I/O	
USB Port	- 8 x USB 2.0 ports - 4 x USB 3.0/2.0 ports
Digital I/O	8-bit programmable Digital Input/Output
Storage	3 x Serial ATA ports with 600MB/s HDD transfer rate
Expansion Bus	8 x PCIe1 Gen.2, LPC
Ethernet Chipset	1 x Intel® i218LM PCIe GbE PHY with iAMT
Audio	HD link
TPM Function	TPM supported (OEM Request)
Display	
Graphics Chipset	Integrated Intel® Graphics
Graphic Interface	LCD: Dual Channels 24-bit LVDS, with resolution up to 1920x1200 DDI port: 2 x DDI ports
Mechanical & Environmental	
Power Requirement	DC 12V, 5VSB
Power Consumption	TBD (Typical, with PBE-1702)
Operating Temp.	-40 ~ 85°C (-40 ~ 185°F)
Operating Humidity	10 ~ 95% @ 85°C (non-condensing)
Dimension (L x W)	95 x 95 mm (3.7" x 3.7")

## 1.4 Inside the Package

Before you begin installing your single board, please make sure that the following materials have been shipped:



1 x EmETXe-i88U0 COM Express CPU Module



1 x Driver CD  
1 x Quick Installation Guide

If any of the above items is damaged or missing, contact your vendor immediately.

## 1.5 Ordering Information

EmETXe-i88U0	5 <sup>th</sup> Generation Intel® Core™ i7-5650U COM Express® Compact Type 6 CPU module
--------------	---

### 1.5.1 Optional Accessories

HS-88U0-F2-T*	Heat spreader with threaded standoffs 95x95x11mm, not compatible with WT series
HS-88U0-F2-NT*	Heat spreader without threaded standoffs 95x95x11mm, not compatible with WT series
HS-0000-W4	Universal evaluation heat sink kit with thermal pad 125x95x22mm, only used on a flat-type heat spreader
HS-88U0-C1	Heat sink with FAN 95x95x30.5mm
CPF-0000-C1	FAN, 4500RPM, 60x60x20mm
PBE-1702	COM Express® Type 6 evaluation carrier board with Super IO F71869ED in ATX form factor
CBK-04-1702-00	Cable kit <ul style="list-style-type: none"><li>• 1 x USB cable</li><li>• 2 x Serial port cables</li><li>• 1 x SATA cable</li></ul>

\*For Wide-Temparature range operation, it is suggested to use HS-88U0-F2-T or HS-88U0-F2-NT in conjunction with HS-0000-W4 .

## 1.6 The Installation Paths of CD Driver

The CPU module supports Windows 7 and 8. Find the necessary drivers on the CD that comes with your purchase. For different OS, the driver installation may vary slightly, but generally they are similar. **DO install Chipset→Graphic→Audio before the rest to prevent errors.**

Find the drivers on CD by the following paths:

### Windows 8.1

Driver	Path
Chipset	\EmETXe-i88U0\Chipset
Graphic	\EmETXe-i88U0\Graphic\Win32_153618 \EmETXe-i87U0\Graphic\Win64_153618
Audio	32bit: \EmETXe-i88U0\Audio\32bit_Win7_Win8_Win81_R275 64bit: \EmETXe-i88U0\Audio\64bit_Win7_Win8_Win81_R275
Ethernet	\EmETXe-i88U0\Ethernet
ME	\EmETXe-i88U0\ME\ME10.0_5M_10.0.30.1072\Installers\MEI-Only Installer
USB 3.0	\EmETXe-i88U0\USB 3.0\USB3_V3.0.0.34

## Windows 7

Driver	Path
Chipset	\EmETXe-i88U0\Chipset
Graphic	\EmETXe-i88U0\Graphic\Win32_153618
	\EmETXe-i87U0\Graphic\Win64_153618
Audio	32bit: \EmETXe-i88U0\Audio\32bit_Win7_Win8_Win81_R275
	64bit: \EmETXe-i88U0\Audio\64bit_Win7_Win8_Win81_R275
Ethernet	\EmETXe-i88U0\Ethernet
ME	\EmETXe-i88U0\ME\ME10.0_5M_10.0.30.1072\Installers\MEI-Only Installer
	\EmETXe-i88U0\ME\Win 7\Win32
	\EmETXe-i88U0\ME\Win 7\Win64
USB 3.0	\EmETXe-i88U0\USB 3.0\USB3_V3.0.0.34



# Chapter 2

## Board Overview

## 2.1 What Is “COM Express®”?

With more and more demands on small and embedded industrial boards, a multi-functional COM (Computer-on-Module) surfaces as a great solution.

COM Express® supports seven pin-out types applying to Basic and Extended form factors:

Module Type 1 and 10 support single connector with two rows (220 pins).

Module Type 2, 3, 4, 5 and 6 support two connectors with four rows (440 pins). EmETXe-i88U0 is a Type-6 module.

Difference between Standard Type 6 and EmETXe-i88U0 is listed as below:

Module Type	Standard Type 6	EmETXe-i88U0
Connectors	2	2
Connector Rows	A, B, C, D	A, B, C, D
PCIe Lanes (Max)	24	8
LAN (Max)	1	1
Serial Ports (Max)	2	0
Digital Display I/F (Max)	3	2
USB 3.0 Ports (Max)	4	4


Row AB provides pins for PCI Express, SATA, LVDS, LCD channel, LPC bus, system and power management, VGA, LAN, and power and ground interfaces.

Row CD provides SDVO and legacy PCI signals next to additional PCI Express, LAN and power and ground signals. The COM are targeted at following applications:


- Retail & Advertising
- Medical
- Test & Measurement
- Gaming & Entertainment
- Industrial & Automation
- Military & Government
- Security

## 2.2 Board Dimensions

The following illustration shows the dimension of EmETXe-i88U0, with the measurements in width, depth, and height called out.

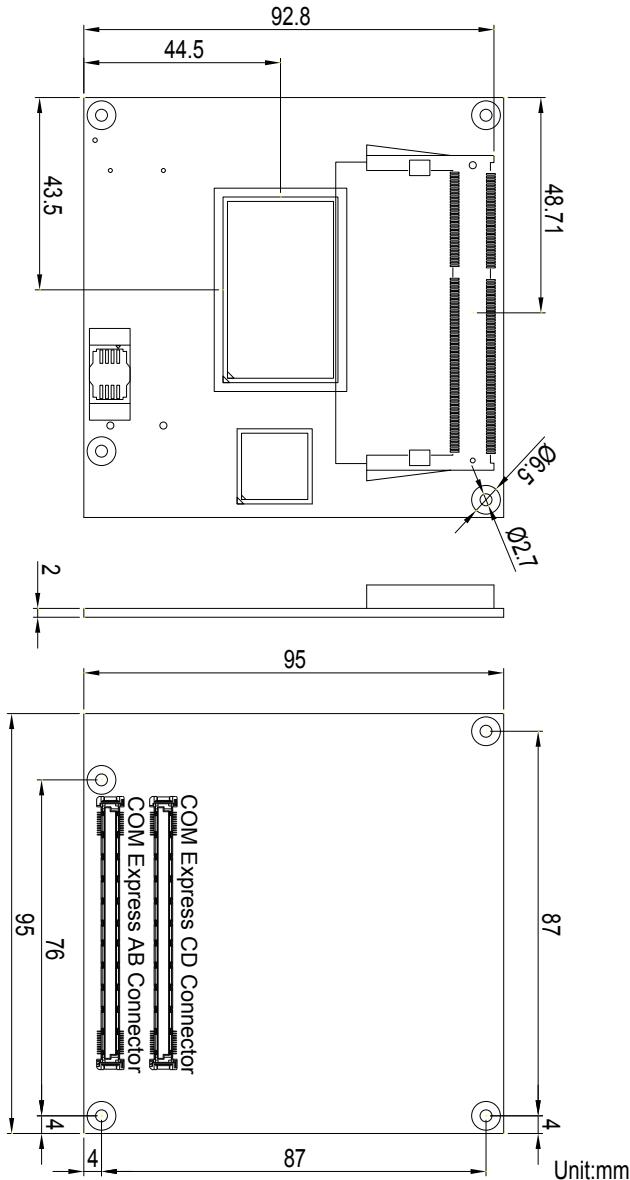


## 2.3 Block Diagram

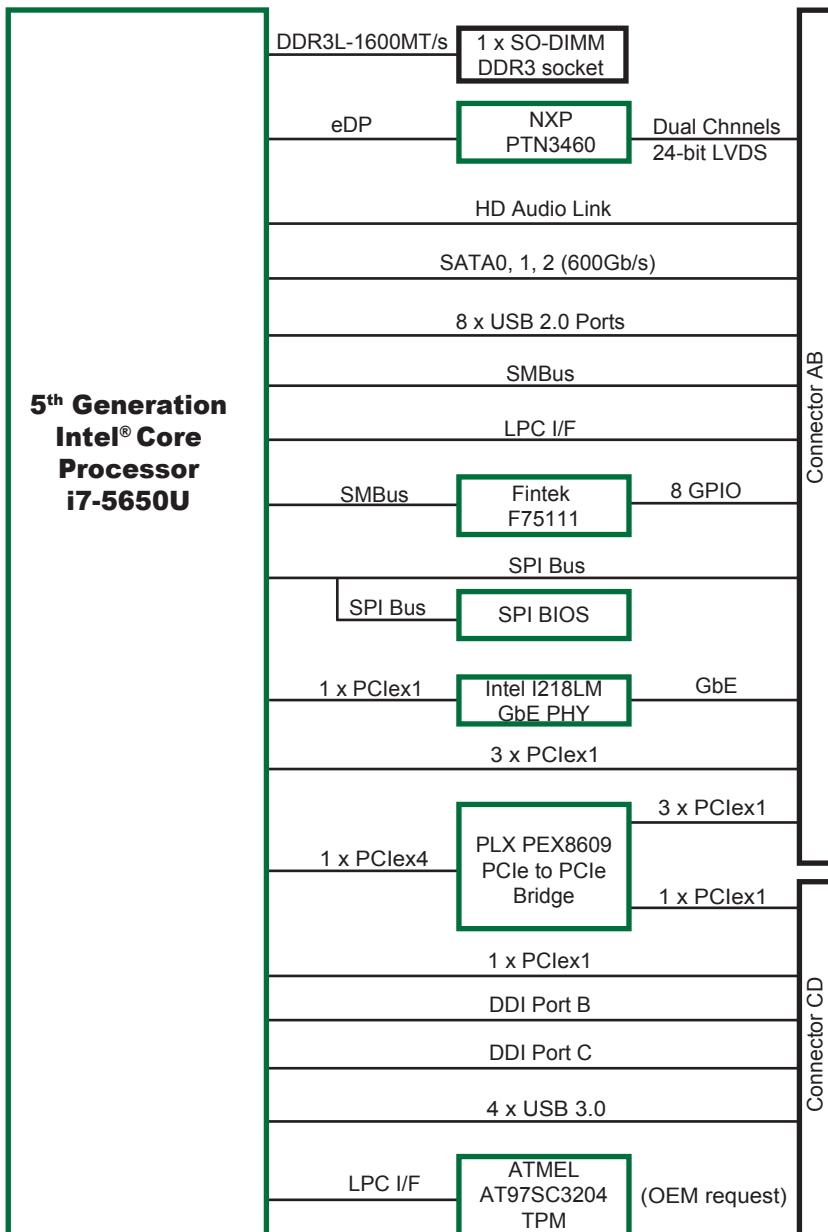


## 2.4 Connector Pin Definition

Being a most commonly-used Type 6, the EmETXe-i88U0 features two board-to-board connectors on bottom side.

### Top Side

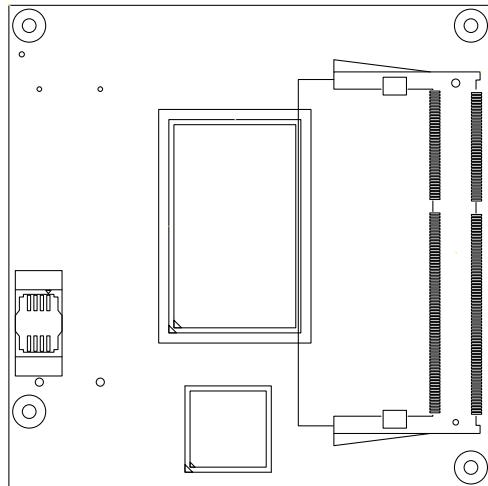

### Bottom Side

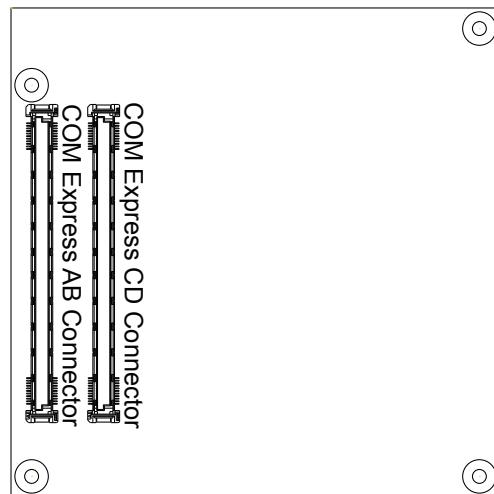

**COM Express AB Connector (bottom side)**

B1	GND (FIXED)	GND (FIXED)	A1	B56	PCIE_RX4-	A56
B2	GBE0_ACT#	GBE0_MDI3-	A2	B57	GPO2	A57
B3	LPC_FRAME#	GBE0_MDI3+	A3	B58	PCIE_RX3+	A58
B4	LPC_ADO	GBE0_LINK100#	A4	B59	PCIE_RX3-	A59
B5	LPC_AD1	GBE0_LINK1000#	A5	B60	GND	A60
B6	LPC_AD2	GBE0_MDI2-	A6	B61	PCIE_RX2+	A61
B7	LPC_AD3	GBE0_MDI2+	A7	B62	PCIE_RX2-	A62
B8	LPC_DRQ0#	N/C	A8	B63	GPO3	A63
B9	LPC_DRQ1#	GBE0_MDI1-	A9	B64	PCIE_RX1+	A64
B10	LPC_CLK	GBE0_MDI1+	A10	B65	PCIE_RX1-	A65
B11	GND (FIXED)	GND (FIXED)	A11	B66	WAKE0#	A66
B12	PWRBTN#	GBE0_MDI0-	A12	B67	WAKE1#	A67
B13	SMB_CK	GBE0_MDI0+	A13	B68	PCIE_RX0+	A68
B14	SMB_DAT	GBE_CTREF	A14	B69	PCIE_RX0-	A69
B15	SMB_ALERT#	SUS_S3#	A15	B70	GND	A70
B16	SATA1_TX+	SATA0_TX+	A16	B71	LVDS_B0+	A71
B17	SATA1_TX-	SATA0_TX-	A17	B72	LVDS_B0-	A72
B18	SUS_STAT#	SUS_S4#	A18	B73	LVDS_B1+	A73
B19	SATA1_RX+	SATA0_RX+	A19	B74	LVDS_B1-	A74
B20	SATA1_RX-	SATA0_RX-	A20	B75	LVDS_B2+	A75
B21	GND (FIXED)	GND (FIXED)	A21	B76	LVDS_B2-	A76
B22	N/C	SATA2_TX+	A22	B77	LVDS_B3+	A77
B23	N/C	SATA2_TX-	A23	B78	LVDS_B3-	A78
B24	PWR_OK	SUS_S5#	A24	B79	LVDS_BKLT_EN	A79
B25	N/C	SATA2_RX+	A25	B80	GND	A80
B26	N/C	SATA2_RX-	A26	B81	LVDS_B_CK+	A81
B27	WDT	BATLOW#	A27	B82	LVDS_B_CK-	A82
B28	N/C	ATA_ACT#	A28	B83	CKLVDSD_BKLT_CTRL	A83
B29	AC_SDIN1	AC_SYNC	A29	B84	VCC_5V_SBY	A84
B30	AC_SDIN0	AC_RST#	A30	B85	VCC_5V_SBY	A85
B31	GND	GND	A31	B86	VCC_5V_SBY	RSVD
B32	SPKR	AC_BITCLK	A32	B87	VCC_5V_SBY	RSVD
B33	I2C_CK	AC_SDOUT	A33	B88	BIOS_DIS1#	PCIE0_CK_REF+
B34	I2C_DAT	BIOS_DISABLE0#	A34	B89	N/C	PCIE0_CK_REF
B35	THR#	THRMTTRIP#	A35	B90	GND	A90
B36	USB7-	USB6-	A36	B91	N/C	SPI_POWER
B37	USB7+	USB6+	A37	B92	N/C	SPI_MISO
B38	USB_4_5_OC#	USB_6_7_OC#	A38	B93	N/C	GPO0
B39	USB5-	USB4-	A39	B94	N/C	SPI_CLK
B40	USB5+	USB4+	A40	B95	N/C	SPI_MOSI
B41	GND	GND	A41	B96	N/C	TMP_PP
B42	USB3-	USB2-	A42	B97	SPI_CS#	N/C
B43	USB3+	USB2+	A43	B98	N/C	A97
B44	USB_0_1_OC#	USB_2_3_OC#	A44	B99	N/C	A98
B45	USB1-	USB0-	A45	B100	GND	A99
B46	USB1+	USB0+	A46	B101	FAN_PWMOUT	GND
B47	EXCD1_PERST#	VCC_RTC	A47	B102	FAN_TACHIN	A100
B48	EXCD1_CPP#	EXCD0_PERST#	A48	B103	SLEEP#	A101
B49	SYS_RESET#	EXCD0_CPP#	A49	B104	VCC_12V	A102
B50	CB_RESET#	LPC_SERIRQ	A50	B105	VCC_12V	A103
B51	GND	GND	A51	B106	VCC_12V	A104
B52	PCIE_RX5+	PCIE_RX5+	A52	B107	VCC_12V	A105
B53	PCIE_RX5-	PCIE_RX5-	A53	B108	VCC_12V	A106
B54	GPO1	GPI0	A54	B109	VCC_12V	A107
B55	PCIE_RX4+	PCIE_RX4+	A55	B110	GND	A108

## COM Express CD Connector (bottom side)

D1	GND (FIXED)	GND (FIXED)	C1		D56	N/C	N/C	C56
D2	GND	GND	C2		D57	TYPE2#	N/C	C57
D3	USB_SSTX0-	USB_SSRX0-	C3		D58	N/C	N/C	C58
D4	USB_SSTX0+	USB_SSRX0+	C4		D59	N/C	N/C	C59
D5	GND	GND	C5		D60	GND (FIXED)	GND (FIXED)	C60
D6	USB_SSTX1-	USB_SSRX1-	C6		D61	N/C	N/C	C61
D7	USB_SSTX1+	USB_SSRX1+	C7		D62	N/C	N/C	C62
D8	GND	GND	C8		D63	N/C	N/C	C63
D9	N/C	N/C	C9		D64	N/C	N/C	C64
D10	N/C	N/C	C10		D65	N/C	N/C	C65
D11	GND (FIXED)	GND (FIXED)	C11		D66	N/C	N/C	C66
D12	N/C	N/C	C12		D67	N/C	N/C	C67
D13	N/C	N/C	C13		D68	N/C	N/C	C68
D14	GND	GND	C14		D69	N/C	N/C	C69
D15	DDI1_CTRLCLK_AUX+	N/C	C15		D70	GND (FIXED)	GND (FIXED)	C70
D16	DDI1_CTRLCLK_AUX-	N/C	C16		D71	N/C	N/C	C71
D17	N/C	RSVD	C17		D72	N/C	N/C	C72
D18	N/C	RSVD	C18		D73	GND	GND	C73
D19	PCIE_TX6+	PCIE_RX6+	C19		D74	N/C	N/C	C74
D20	PCIE_TX6-	PCIE_RX6-	C20		D75	N/C	N/C	C75
D21	GND(FIXED)	GND(FIXED)	C21		D76	GND	GND	C76
D22	PCIE_TX7+	PCIE_RX7+	C22		D77	N/C	N/C	C77
D23	PCIE_TX7-	PCIE_RX7-	C23		D78	N/C	N/C	C78
D24	N/C	DDI1_HPD	C24		D79	N/C	N/C	C79
D25	N/C	N/C	C25		D80	GND (FIXED)	GND (FIXED)	C80
D26	DDI1_PAIR0+	N/C	C26		D81	N/C	N/C	C81
D27	DDI1_PAIR0-	RSVD	C27		D82	N/C	N/C	C82
D28	N/C	RSVD	C28		D83	N/C	N/C	C83
D29	DDI1_PAIR1+	N/C	C29		D84	GND	GND	C84
D30	DDI1_PAIR1-	N/C	C30		D85	N/C	N/C	C85
D31	GND(FIXED)	GND (FIXED)	C31		D86	N/C	N/C	C86
D32	DDI1_PAIR2+	DDI2_CTRLCLK_AUX+	C32		D87	GND	GND	C87
D33	DDI1_PAIR2-	DDI2_CTRLCLK_AUX-	C33		D88	N/C	N/C	C88
D34	DDI1_DDC_AUX_SEL	DDI2_DDC_AUX_SEL	C34		D89	N/C	N/C	C89
D35	N/C	RSVD	C35		D90	GND (FIXED)	GND (FIXED)	C90
D36	DDI1_PAIR3+	N/C	C36		D91	N/C	N/C	C91
D37	DDI1_PAIR3-	N/C	C37		D92	N/C	N/C	C92
D38	N/C	N/C	C38		D93	GND	GND	C93
D39	DDI1_PAIR0+	N/C	C39		D94	N/C	N/C	C94
D40	DDI1_PAIR0-	N/C	C40		D95	N/C	N/C	C95
D41	GND(FIXED)	GND(FIXED)	C41		D96	GND	GND	C96
D42	DDI1_PAIR1+	N/C	C42		D97	N/C	N/C	C97
D43	DDI1_PAIR1-	N/C	C43		D98	N/C	N/C	C98
D44	DDI2_HPD	N/C	C44		D99	N/C	N/C	C99
D45	N/C	RSVD	C45		D100	GND (FIXED)	GND (FIXED)	C100
D46	DDI2_PAIR2+	N/C	C46		D101	N/C	N/C	C101
D47	DDI2_PAIR2-	N/C	C47		D102	N/C	N/C	C102
D48	N/C	RSVD	C48		D103	GND	GND	C103
D49	DDI2_PAIR3+	N/C	C49		D104	VCC_12V	VCC_12V	C104
D50	DDI2_PAIR3-	N/C	C50		D105	VCC_12V	VCC_12V	C105
D51	GND (FIXED)	GND (FIXED)	C51		D106	VCC_12V	VCC_12V	C106
D52	N/C	PEG_RX0+	C52		D107	VCC_12V	VCC_12V	C107
D53	N/C	PEG_RX0-	C53		D108	VCC_12V	VCC_12V	C108
D54	PEG_LANE_RV#	N/C	C54		D109	VCC_12V	VCC_12V	C109
D55	N/C	N/C	C55		D110	GND (FIXED)	GND (FIXED)	C110

---


This page is intentionally left blank.

# Chapter 3

## Installation & Maintenance


### 3.1 Installing the CPU Module on Carrier Board

1. Find the COM Express connectors on carrier board PBE-1702, which is available in Section [1.5.1 Optional Accessories on page 4](#).
2. Embed EmETXe-i88U0 into PBE-1702 via COM Express connectors as below; that is, COM Express AB to AB and CD to CD.

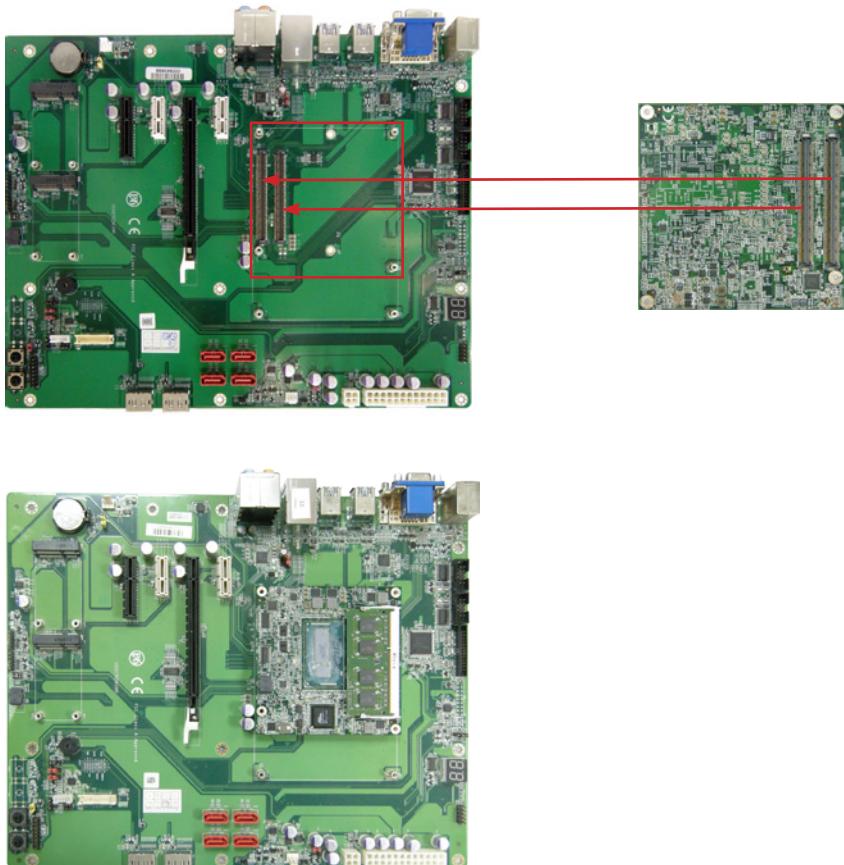

### 3.2 Installing the Heatsink

1. Locate EmETXe-i88U0 mounted on PBE-1702.
2. Prepare the heatspred included in optional accessories. (See Section [1.5.1 Optional Accessories on page 4](#)) Put heatspred on the CPU module and lock it. Make sure thermal grease in contact with CPU and chipset on CPU module. Plug power cable into appropriate connector if there is a fan.

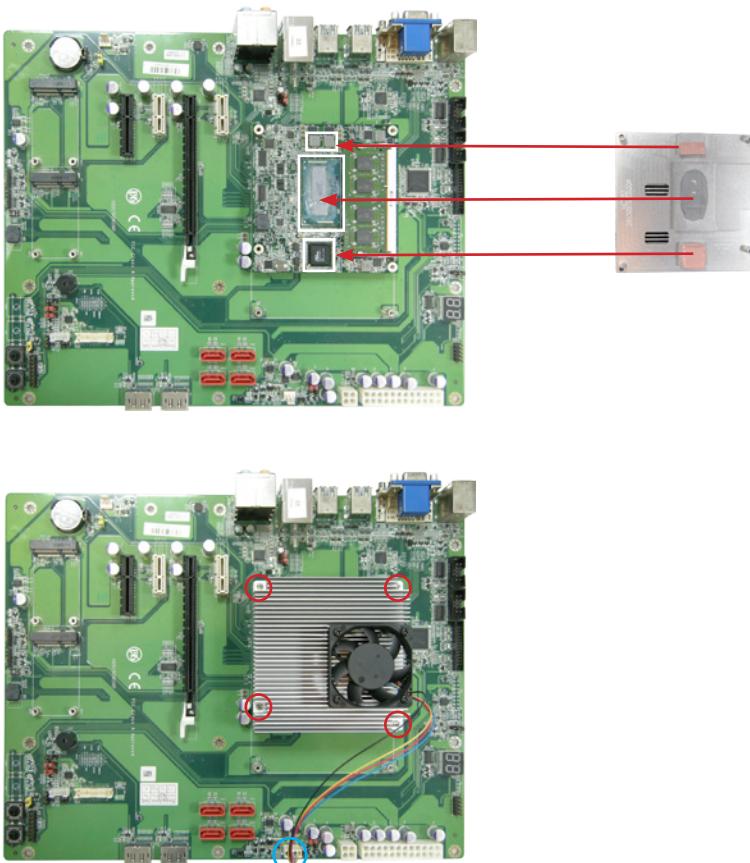

---

This page is intentionally left blank.




# Chapter 4

## BIOS

## 4.1 Main

The AMI BIOS provides a Setup utility program for specifying the system configurations and settings. The BIOS RAM of the system stores the Setup utility and configurations. When you turn on the computer, the AMI BIOS is immediately activated. To enter the BIOS SETUP UTILITY, press “**Delete**” once the power is turned on. When the computer is shut down, the battery on the motherboard supplies the power for BIOS RAM.

The **Main Setup** screen lists the following information:

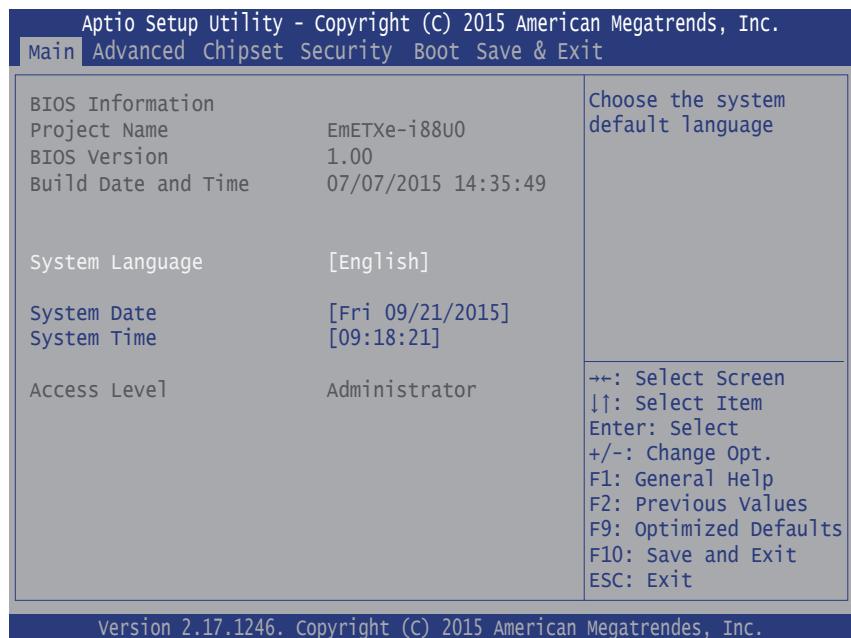

Setting	Description
System Language	Choose the system default language.
System Date	<p>Set the system date. Use Tab to switch between Data elements. Note that the ‘Day’ automatically changes when you set the date.</p> <ul style="list-style-type: none"> <li>► The date format is: <b>Day</b>: Sun to Sat</li> <li><b>Month</b>: 1 to 12</li> <li><b>Date</b>: 1 to 31</li> <li><b>Year</b>: 1998 to 2099</li> </ul>

System Time	Set the system time. Use Tab to switch between Time elements. ► The time format is: <b>Hour:</b> 00 to 23 <b>Minute:</b> 00 to 59 <b>Second:</b> 00 to 59
-------------	---


## Key Commands

BIOS Setup Utility is mainly a key-based navigation interface. Please refer to the following key command instructions for navigation process.

Keystroke	Function
◀ ▶	Move to highlight a particular configuration screen from the top menu bar / Move to highlight items on the screen
▼ ▲	Move to highlight previous/next item
Enter	Select and access a setup item/field
Esc	On the Main Menu – Quit the setup and not save changes into CMOS (a message screen will display and ask you to select “OK” or “Cancel” for exiting and discarding changes. Use “←” and “→” to select and press “Enter” to confirm) On the Sub Menu – Exit current page and return to main menu
Page Up / +	Increase the numeric value on a selected setup item / make change
Page Down -	Decrease the numeric value on a selected setup item / make change
F1	Activate “General Help” screen
F0	Save the changes that have been made in the setup and exit. (a message screen will display and ask you to select “OK” or “Cancel” for exiting and saving changes. Use “←” and “→” to select and press “Enter” to confirm)


## 4.2 Advanced

The “Advanced” setting page provides you the options to configure the details of your hardware, such as ACPI, CPU, SATA, AMT, USB and Super IO.

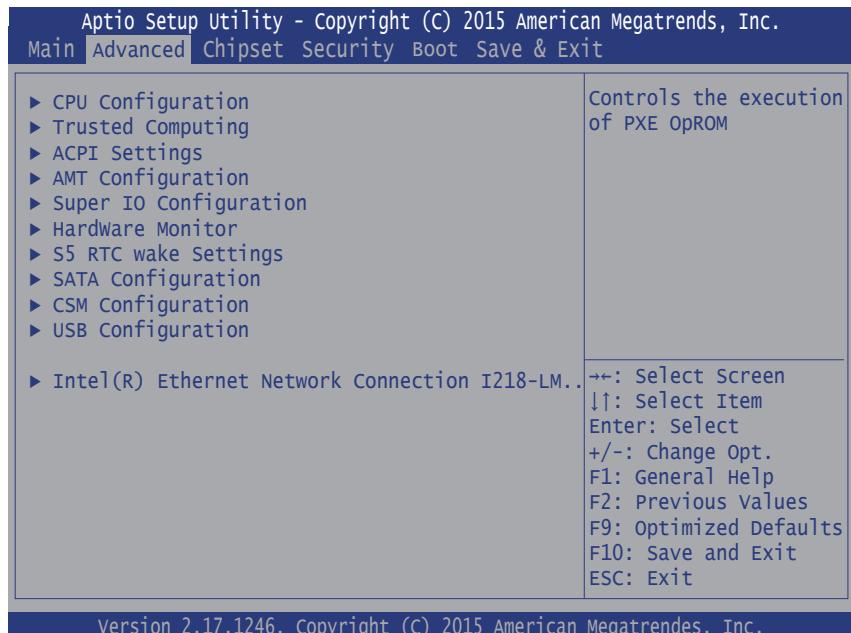

Setting	Description
CPU Configuration	See Section <a href="#">4.2.1 CPU Configuration on page 23</a>
Trusted Computing	See Section <a href="#">4.2.2 Trusted Computing on page 24</a>
ACPI Settings	See Section <a href="#">4.2.3 ACPI Settings on page 25</a>
AMT Configuration	See Section <a href="#">4.2.4 AMT Configuration on page 26</a>
Super IO Configuration	See Section <a href="#">4.2.5 Super IO Configuration on page 27</a>
Hardware Monitor	See Section <a href="#">4.2.6 Hardware Monitor on page 29</a>
S5 RTC wake Settings	See Section <a href="#">4.2.7 S5 RTC wake Settings on page 30</a>
SATA Configuration	See Section <a href="#">4.2.8 SATA Configuration on page 31</a>
CSM Configuration	See Section <a href="#">4.2.9 CSM Configuration on page 32</a>
USB Configuration	See Section <a href="#">4.2.10 USB Configuration on page 33</a>
Intel(R) Ethernet Net-work Connection I218-	See Section <a href="#">4.2.11 Intel(R) Ethernet Connection I218LM on page 35</a>

#### 4.2.1 CPU Configuration

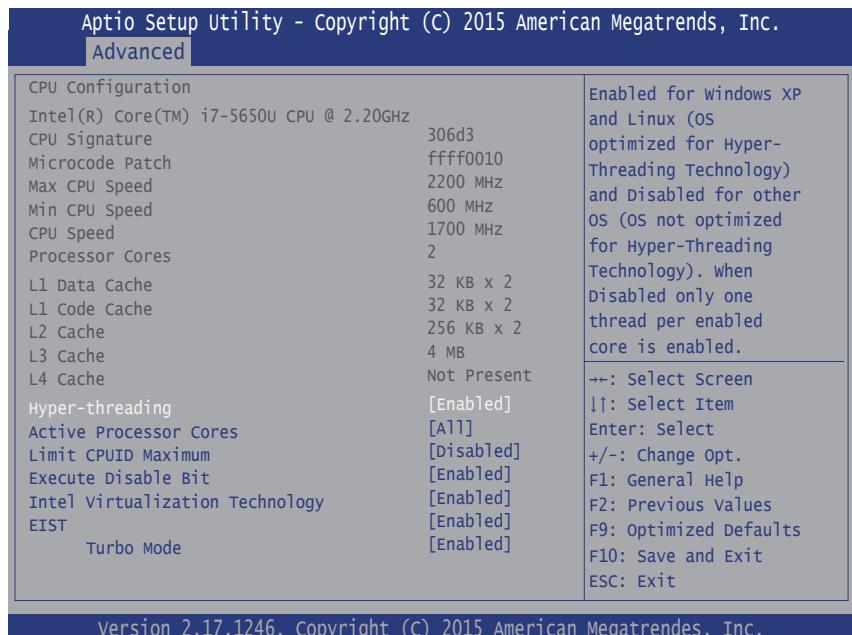


Version 2.17.1246. Copyright (C) 2015 American Megatrends, Inc.

Setting	Description
Hyper-threading	<b>Enabled</b> (default) for Windows XP and Linux (OS optimized for Hyper-Threading Technology) and <b>Disabled</b> for other OS (OS not optimized or Hyper-Threading Technology). When Disabled only one thread per enabled core is enabled.
Active Processor Cores	Number of cores to enable in each processor package. ► Options: <b>All</b> (default) and <b>1</b>
Limit CPUID Maximum	Disabled for Windows XP ► Options: <b>Enabled</b> or <b>Disabled</b> (default)
Execute Disable Bit	XD can prevent certain classes of malicious buffer overflow attacks when combined with a supporting OS (Windows Server 2003 SP1, Windows XP SP2, SuSE Linux 9.2, RedHat Enterprise 3 Update 3.) ► Options: <b>Enabled</b> (default) or <b>Disabled</b>


Intel Virtualization Technology	When enabled, a VMM can utilize the additional hardware capabilities provided by Vanderpool Technology ► Options: <b>Enabled</b> (default) or <b>Disabled</b>
EIST	<b>Enable</b> (default)/ <b>Disable</b> Intel SpeedStep
Turbo Mode	<b>Enable</b> (default)/ <b>Disable</b> Turbo Mode

## 4.2.2 Trusted Computing

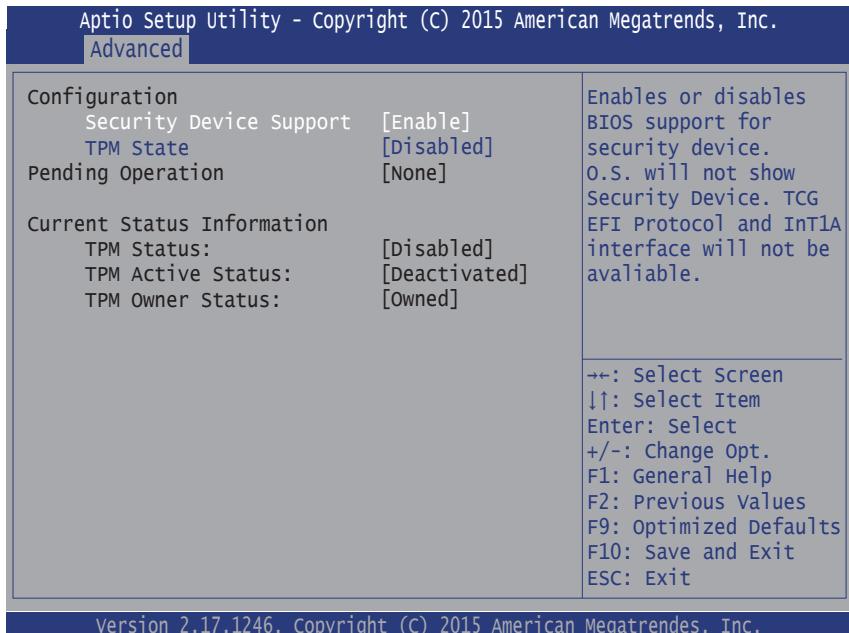


Setting	Description
Security Device Support	<b>Enables</b> (default) or <b>Disables</b> BIOS support for security device.
TPM State	<b>Enables</b> or <b>Disables</b> (default) Security Device.

### 4.2.3 ACPI Settings

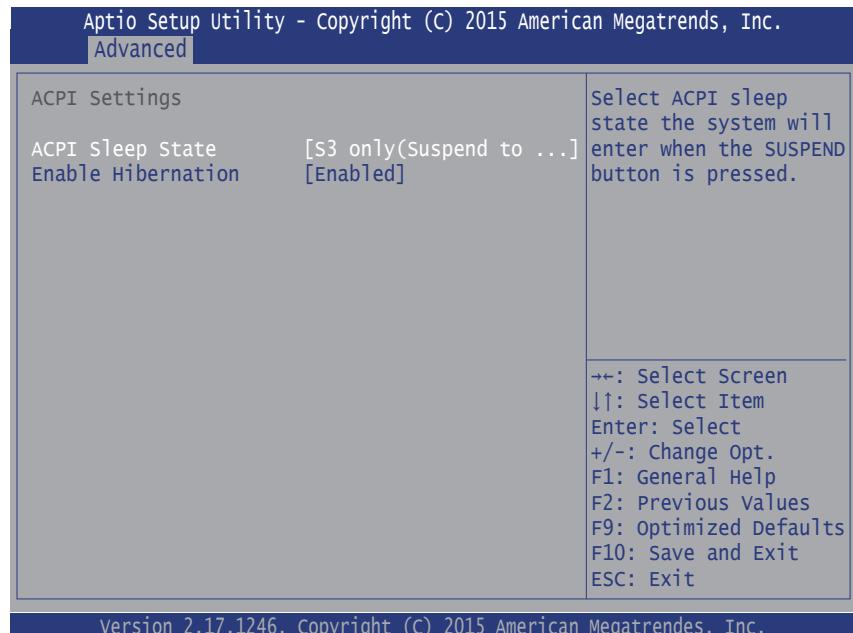


Setting	Description
ACPI Sleep State	Select ACPI sleep state the system will enter when the SUSPEND button is pressed. ▶ Options: <b>Suspend Disabled</b> , <b>S1 only(CPU Stop Clock)</b> , <b>S3 only(Suspend to RAM)</b> (default), <b>Both S1 and S3 available for OS to choose from</b>
Enable Hibernation	<b>Enables</b> (default) or <b>Disables</b> System ability to Hibernate (OS/S4 Sleep State). This option may be not effective with some OS.

#### 4.2.4 AMT Configuration

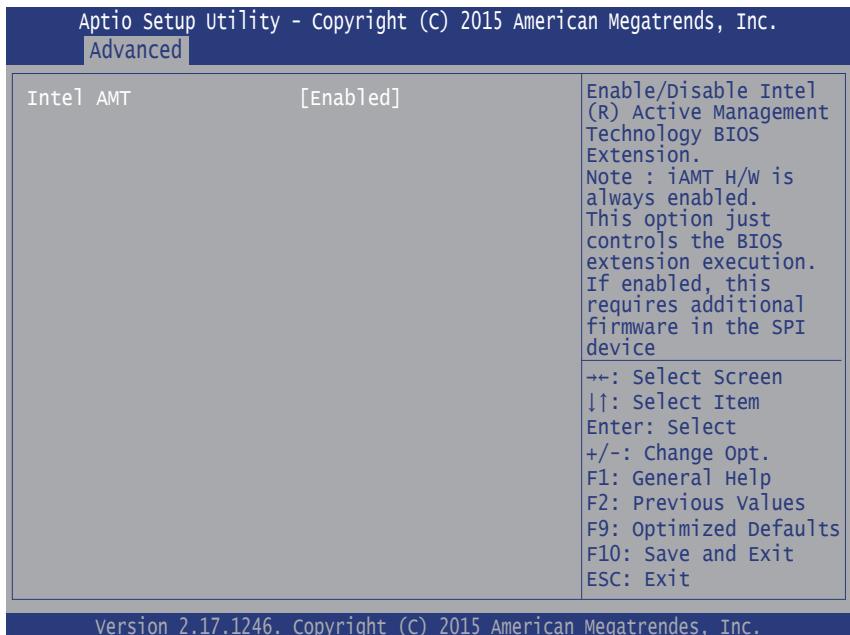

Setting	Description
Intel AMT	<b>Enable</b> (default)/ <b>Disable</b> Intel(R) Active Management Technology BIOS Extension. Note : iAMT H/W is always enabled. This option just controls the BIOS extension execution. If enabled, this requires additional firmware in the SPI device.

#### 4.2.5 Super IO Configuration

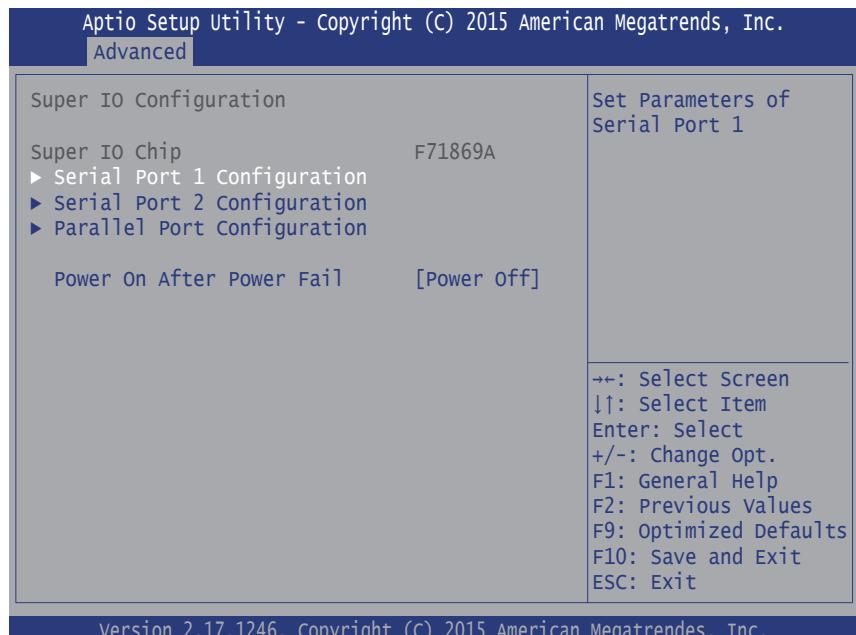

Version 2.17.1246. Copyright (C) 2015 American Megatrends, Inc.

Setting	Description
Serial Port 1 Configuration	
Serial Port 2 Configuration	See next page.
Parallel Port Configuration	
Restore AC Power Loss	<p>Specify what state to go to when power is re-applied after a power failure.</p> <p>► Options: <b>Last State</b>, <b>Power On</b> and <b>Power Off</b> (default)</p>

## Serial Port 1 Configuration

Setting	Description
Serial Port	<b>Enable</b> (default) or <b>Disable</b> Serial Port (COM).
Change Settings	Select an optimal setting for Super IO device. <ul style="list-style-type: none"> <li>▶ Options:  <b>Autox-AMI</b>(default); <b>IO=3F8h; IRQ=4</b> ;  <b>IO=3F8h; IRQ=3, 4, 5, 6, 7, 9, 10, 11, 12</b>;  <b>IO=2F8h; IRQ=3, 4, 5, 6, 7, 9, 10, 11, 12</b>;  <b>IO=3E8h; IRQ=3, 4, 5, 6, 7, 9, 10, 11, 12</b>;  <b>IO=2E8h; IRQ=3, 4, 5, 6, 7, 9, 10, 11, 12</b> </li> </ul>


## Serial Port 2 Configuration

Setting	Description
Serial Port	<b>Enable</b> (default) or <b>Disable</b> Serial Port (COM).
Change Settings	Select an optimal setting for Super IO device. <ul style="list-style-type: none"> <li>▶ Options:  <b>Autox</b>(default); <b>IO=2F8h; IRQ=3</b>;  <b>IO=3F8h; IRQ=3, 4, 5, 6, 7, 9, 10, 11, 12</b>;  <b>IO=2F8h; IRQ=3, 4, 5, 6, 7, 9, 10, 11, 12</b>;  <b>IO=3E8h; IRQ=3, 4, 5, 6, 7, 9, 10, 11, 12</b>;  <b>IO=2E8h; IRQ=3, 4, 5, 6, 7, 9, 10, 11, 12</b> </li> </ul>
Device Mode	Change the Serial Port mode. <ul style="list-style-type: none"> <li>▶ Options:  <b>Disable IR1 function</b>;  <b>Enable IR1 function,active pluse 1.6uS</b>;  <b>Enable IR1 function,active pluse 3/16 bit time</b> </li> </ul>


## Parallel Port Configuration

Setting	Description
Parallel Port	<b>Enable</b> (default) or <b>Disable</b> Parallel Port (LPT/LPTE).
Change Settings	Select an optimal setting for Super IO device. ► Options: <b>Autox-AMI</b> (default); <b>IO=378h; IRQ=5;</b> <b>IO=378h; IRQ=5, 6, 7, 9, 10, 11, 12;</b> <b>IO=278h; IRQ=5, 6, 7, 9, 10, 11, 12;</b> <b>IO=38Ch; IRQ=5, 6, 7, 9, 10, 11, 12;</b>
Device Mode (only for Parallel Port Configuration)	Change the Printer Port mode. ► Options: <b>STD Printer Mode</b> (default), <b>SPP Mode, EPP-1.9 and SPP Mode, EPP-1.7 and SPP Mode, ECP Mode, ECP and EPP 1.9 Mode, ECP and EPP 1.7 Mode.</b>

### 4.2.6 Hardware Monitor

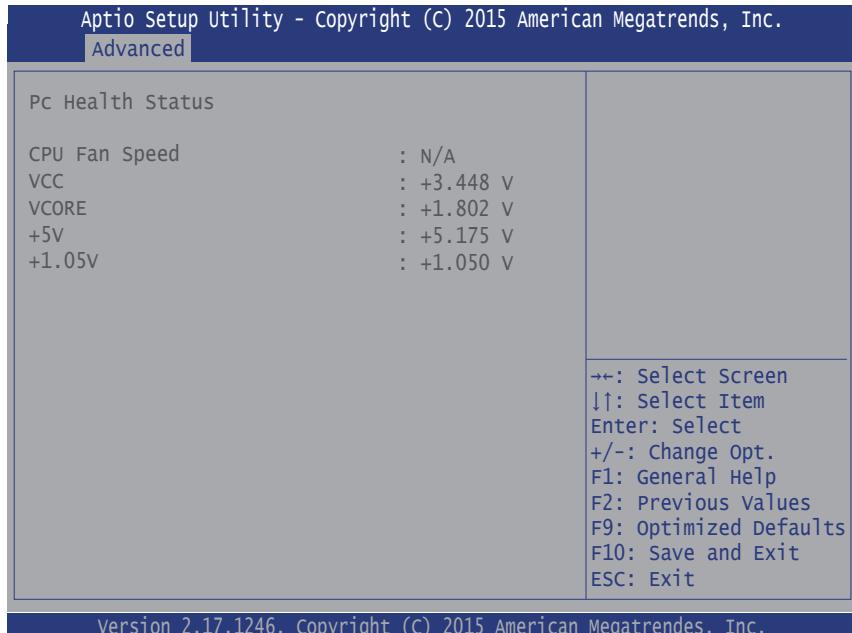


#### 4.2.7 S5 RTC wake Settings

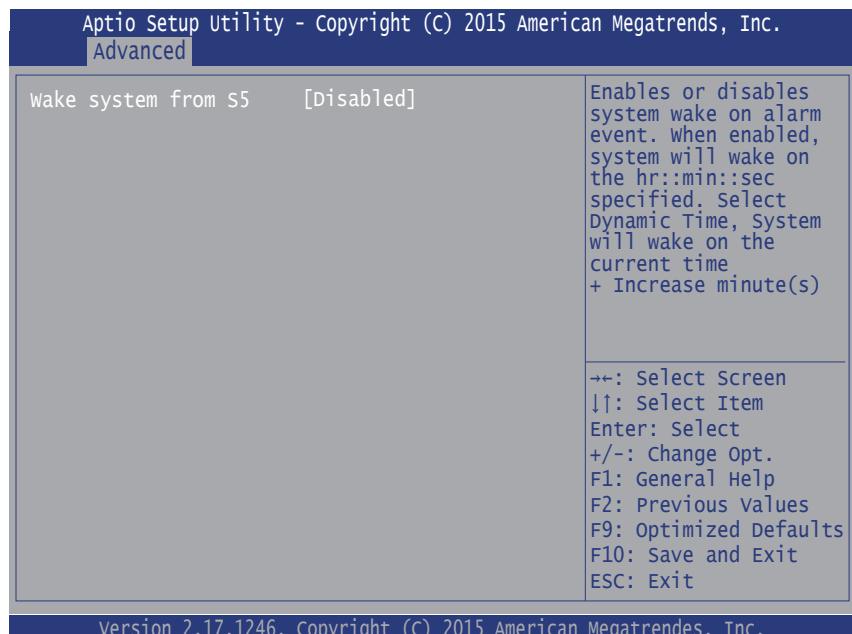

Version 2.17.1246. Copyright (C) 2015 American Megatrends, Inc.

Setting	Description
Wake system from S5	Enables or disables system wake on alarm event. When enabled, system will wake on the hr::min::sec specified. ▶ Options: <b>Disabled</b> (default), <b>Fixed Time</b> , and <b>Dynamic Time</b>


#### 4.2.8 SATA Configuration

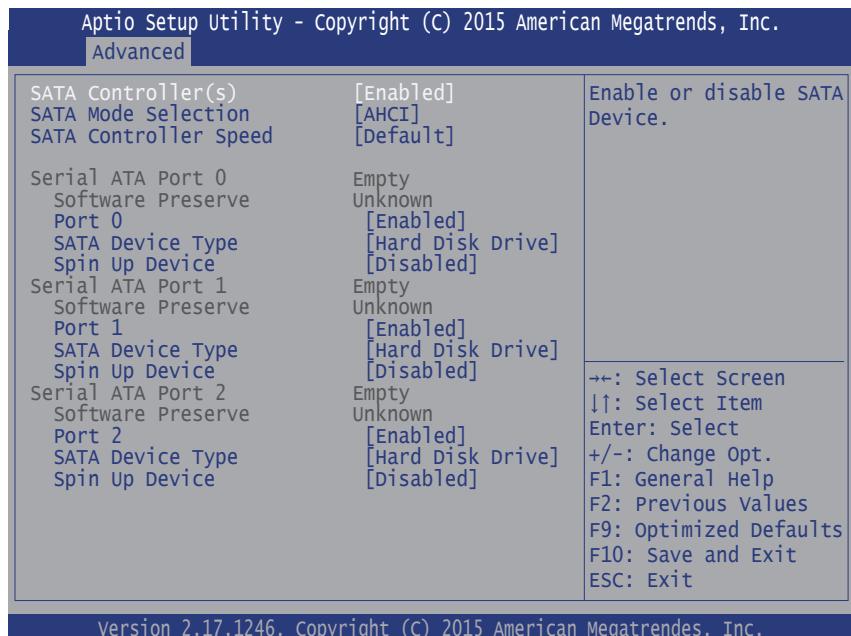

Version 2.17.1246. Copyright (C) 2015 American Megatrends, Inc.


Setting	Description
<b>SATA Controller(s)</b>	<b>Enable</b> (default) or <b>disable</b> SATA Device.
<b>SATA Mode Selection</b>	Determines how SATA controller(s) operate. ▶ Options: <b>AHCI</b> (default) or <b>RAID</b>
<b>SATA Controller Speed</b>	Indicates the maximum speed the SATA controller can support. ▶ Options: <b>Default</b> (default), <b>Gen1</b> , <b>Gen2</b> , <b>Gen3</b>
<b>Port 0/1/2</b>	<b>Enable</b> (default) or <b>disable</b> SATA Port.
<b>Hot Plug</b>	<b>Enable</b> or <b>disable</b> (default) Hot Plug.
<b>SATA Device Type</b>	Identify the SATA port is connected to <b>Solid State Drive</b> or <b>Hard Disk Drive</b> (default).

#### 4.2.9 CSM Configuration

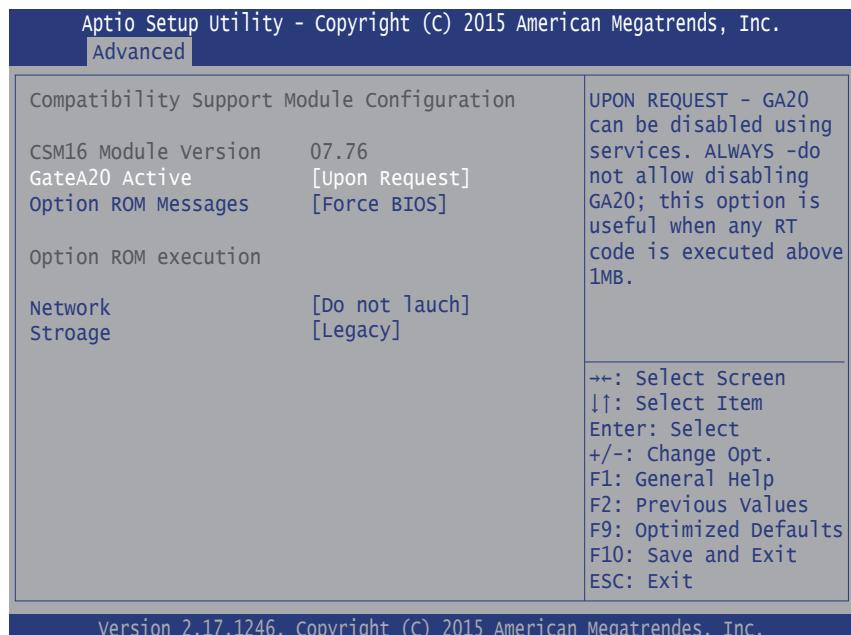

Setting	Description
GateA20 Active	Select setting for GateA20 ► Options: <b>UPON REQUEST</b> - GA20 can be disabled using services <b>ALWAYS</b> -do not allow disabling GA20
Option ROM Messages	Set display mode for Option ROM ► Options: <b>Force BIOS</b> (default) and <b>Keep Current</b>
Network	Control the execution of UEFI and Legacy PXE OpROM ► Options: <b>Do not launch</b> (default) and <b>Legacy</b>
Storage	Control the execution of UEFI and Legacy Storage OpROM ► Options: <b>Do not launch</b> ; <b>UEFI</b> and <b>Legacy</b> (default)

#### 4.2.10 USB Configuration

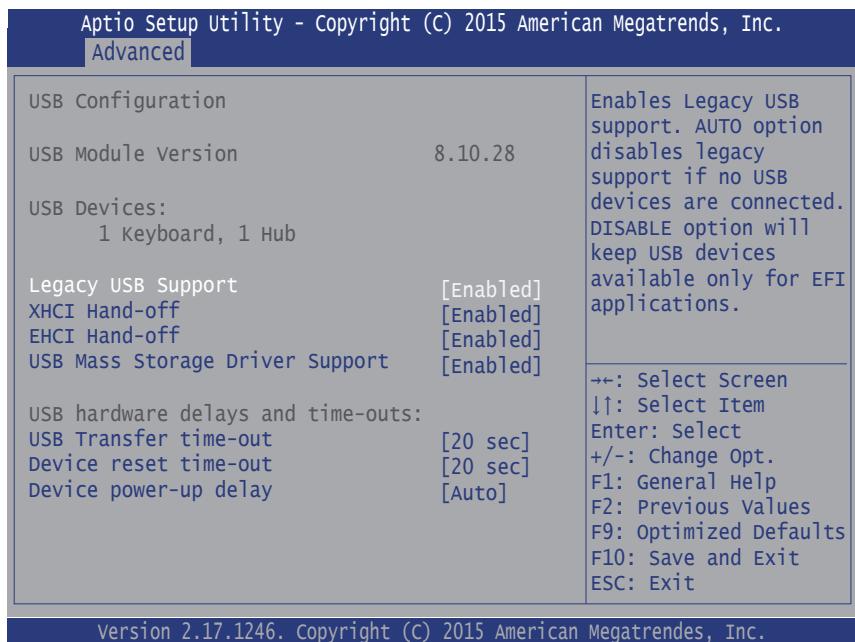


Version 2.17.1246. Copyright (C) 2015 American Megatrends, Inc.

Setting	Description
Legacy USB Support	<b>Enables</b> (default) Legacy USB support. <b>AUTO</b> option disables legacy support if no USB devices are connected. <b>DISABLE</b> option will keep USB devices available only for EFI applications.
XHCI Hand-off	<b>Enable</b> (default) or <b>Disable</b> XHCI Hand-off This is a workaround for OSes without XHCI hand-off support. The XHCI ownership change should be claimed by XHCI driver.
EHCI Hand-off	<b>Enable</b> (default) or <b>Disable</b> EHCI Hand-off This is a workaround for OSes without EHCI hand-off support. The EHCI ownership change should be claimed by EHCI driver.
USB Mass Storage Driver Support	Enables/disables USB Mass Storage Driver Support.

USB hardware delay and time-out	<p>This is a submenu to configure the features of USB hardware delay and time-out. The featured settings are:</p> <table border="1" data-bbox="396 295 997 949"><thead><tr><th data-bbox="396 295 568 335">Setting</th><th data-bbox="568 295 997 335">Description</th></tr></thead><tbody><tr><td data-bbox="396 335 568 435">USB Transfer time-out</td><td data-bbox="568 335 997 435">Use this item to set the time-out value for control, bulk, and interrupt transfers.<ul data-bbox="586 382 997 435" style="list-style-type: none"><li data-bbox="586 382 997 435">▶ Options available are: <b>1 sec, 5 sec, 10 sec, 20 sec</b></li></ul></td></tr><tr><td data-bbox="396 435 568 541">Device reset time-out</td><td data-bbox="568 435 997 541">Use this item to set USB mass storage device start unit command time-out.<ul data-bbox="586 482 997 541" style="list-style-type: none"><li data-bbox="586 482 997 541">▶ Options available are: <b>10 sec, 20 sec, 30 sec, 40 sec</b></li></ul></td></tr><tr><td data-bbox="396 541 568 949">Device power-up delay</td><td data-bbox="568 541 997 949">Use this item to set maximum time the device will take before it properly reports itself to the host controller. 'Auto' uses default value: for a root port it is 100 ms, for a hub port the delay is taken from hub descriptor.<ul data-bbox="586 747 997 949" style="list-style-type: none"><li data-bbox="586 747 997 949">▶ Options available are: <b>Auto:</b> Default <b>Manual:</b> Select <b>Manual</b> you can set value for the following sub-item: 'Device Power-up delay in seconds', the delay range in from 1 to 40 seconds, in one second increments.</li></ul></td></tr></tbody></table>	Setting	Description	USB Transfer time-out	Use this item to set the time-out value for control, bulk, and interrupt transfers. <ul data-bbox="586 382 997 435" style="list-style-type: none"><li data-bbox="586 382 997 435">▶ Options available are: <b>1 sec, 5 sec, 10 sec, 20 sec</b></li></ul>	Device reset time-out	Use this item to set USB mass storage device start unit command time-out. <ul data-bbox="586 482 997 541" style="list-style-type: none"><li data-bbox="586 482 997 541">▶ Options available are: <b>10 sec, 20 sec, 30 sec, 40 sec</b></li></ul>	Device power-up delay	Use this item to set maximum time the device will take before it properly reports itself to the host controller. 'Auto' uses default value: for a root port it is 100 ms, for a hub port the delay is taken from hub descriptor. <ul data-bbox="586 747 997 949" style="list-style-type: none"><li data-bbox="586 747 997 949">▶ Options available are: <b>Auto:</b> Default <b>Manual:</b> Select <b>Manual</b> you can set value for the following sub-item: 'Device Power-up delay in seconds', the delay range in from 1 to 40 seconds, in one second increments.</li></ul>
Setting	Description								
USB Transfer time-out	Use this item to set the time-out value for control, bulk, and interrupt transfers. <ul data-bbox="586 382 997 435" style="list-style-type: none"><li data-bbox="586 382 997 435">▶ Options available are: <b>1 sec, 5 sec, 10 sec, 20 sec</b></li></ul>								
Device reset time-out	Use this item to set USB mass storage device start unit command time-out. <ul data-bbox="586 482 997 541" style="list-style-type: none"><li data-bbox="586 482 997 541">▶ Options available are: <b>10 sec, 20 sec, 30 sec, 40 sec</b></li></ul>								
Device power-up delay	Use this item to set maximum time the device will take before it properly reports itself to the host controller. 'Auto' uses default value: for a root port it is 100 ms, for a hub port the delay is taken from hub descriptor. <ul data-bbox="586 747 997 949" style="list-style-type: none"><li data-bbox="586 747 997 949">▶ Options available are: <b>Auto:</b> Default <b>Manual:</b> Select <b>Manual</b> you can set value for the following sub-item: 'Device Power-up delay in seconds', the delay range in from 1 to 40 seconds, in one second increments.</li></ul>								


#### 4.2.11 Intel(R) Ethernet Connection I218LM

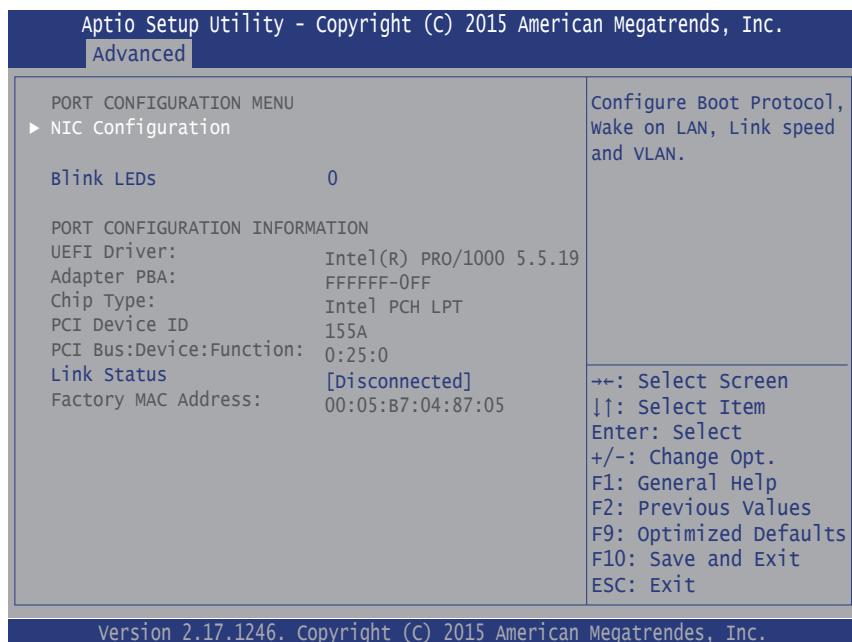

Version 2.17.1246. Copyright (C) 2015 American Megatrends, Inc.

Setting	Description
NIC Configuration	See next page.
Blink LEDs	Blink LEDs for the specified duration.
Link Status	Display Link Status


## NIC Configuration

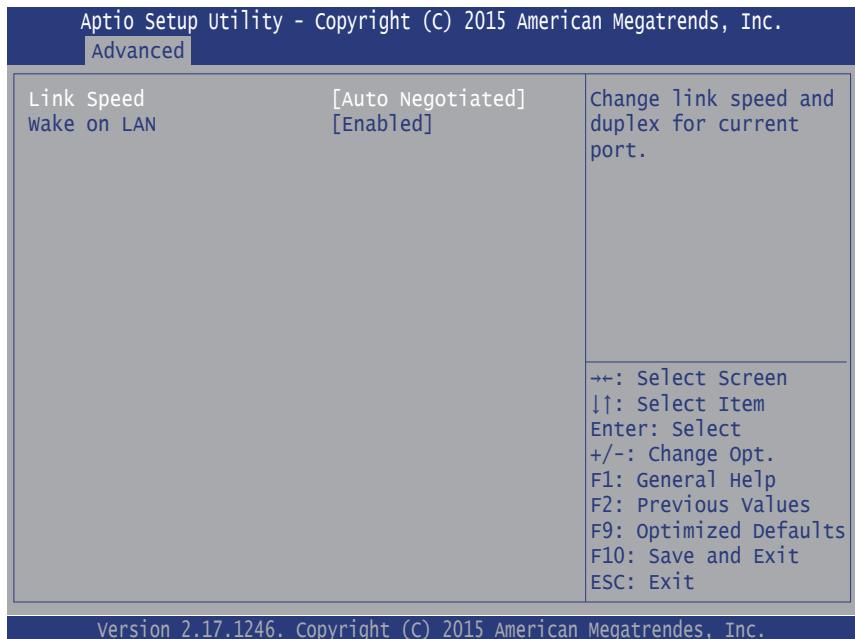

Version 2.17.1246. Copyright (C) 2015 American Megatrends, Inc.


Setting	Description
Link Speed	Change link speed and duplex for current port. ► Options: <b>AutoNeg</b> (default), <b>10 Mbps Half</b> , <b>10 Mbps Full</b> , <b>100 Mbps Half</b> , <b>100 Mbps Full</b>
Wake on LAN	Enable this option to wake the system with a magic packet. ► Options: <b>Enabled</b> (default) or <b>Disabled</b>

## 4.3 Chipset

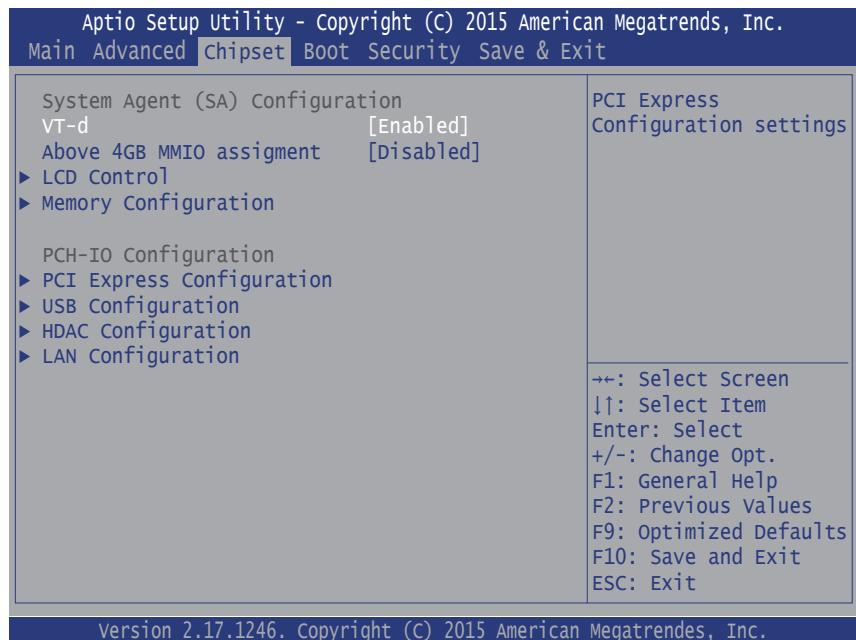

Setting	Description
<b>System Agent (SA) Configuration</b>	
VT-d	<b>Enable</b> (default) or <b>Disable</b> VT-d function
Above 4GB MMIO BIOS assignment	<b>Enable</b> or <b>Disable</b> (default) Above 4GB MMIO BIOS assignment
LCD Control	See Section <a href="#">4.3.1 LCD Control on page 38</a>
Memory Configuration	See Section <a href="#">4.3.2 Memory Configuration on page 39</a>
<b>PCI-IO Configuration</b>	
PCI Express Configuration	See Section <a href="#">4.3.3 PCI Express Configuration on page 40</a>
USB Configuration	See Section <a href="#">4.3.4 USB Configuration on page 42</a>
HDAC Configuration	See Section <a href="#">4.3.5 HDAC Configuration on page 43</a>
LAN Configuration	See Section <a href="#">4.3.6 LAN Configuration on page 44</a>

### 4.3.1 LCD Control

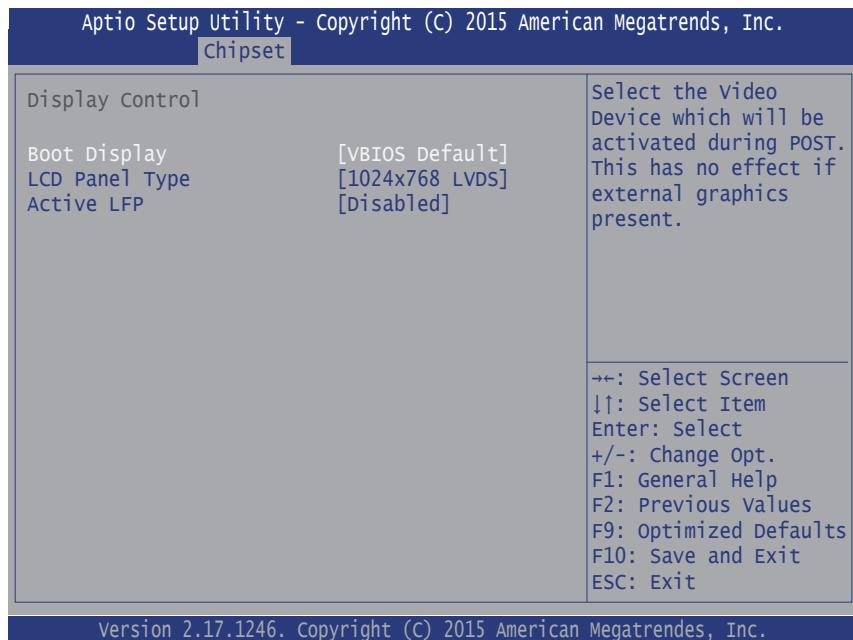


Setting	Description
Boot Display	Select the Video Device which will be activated during POST. This has no effect if external graphics present. ► Options: <b>VBIOS Default, DP, LFP and DVI</b>
LCD Panel Type	Select LCD panel used by Internal Graphics Device by selecting the appropriate setup item. ► Options: <b>VBIOS Default, 640x480/800x600/1024x768 (default)/1280x1024/1400x1050/1600x1200/1366x768/1680x1050/1920x1200/1440x900/1600x900/1024x768/1280x800/1920x1080/2048x1536 LVDS</b>
Active LFP	<b>Enabled</b> (default) or <b>Disabled</b> Active LFP.

#### 4.3.2 Memory Configuration


Aptio Setup Utility - Copyright (C) 2015 American Megatrends, Inc.	
Chipset	
Memory Information	
Memory RC Version	1.7.1.0
Memory Frequency	1600 Mhz
Total Memory	4096 MB (DDR3)
Memory Voltage	1.35v
DIMM#1	4096 MB (DDR3)
DIMM#2	Not Present
CAS Latency (tCL)	11
Minimum delay time	
CAS to RAS (tRCDmin)	11
Row Precharge (tRPmin)	11
Active to Precharge (tRASmin)	28
→←: Select Screen ↑↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F9: Optimized Defaults F10: Save and Exit ESC: Exit	

version 2.17.1246. Copyright (C) 2015 American Megatrendes, Inc.

### 4.3.3 PCI Express Configuration

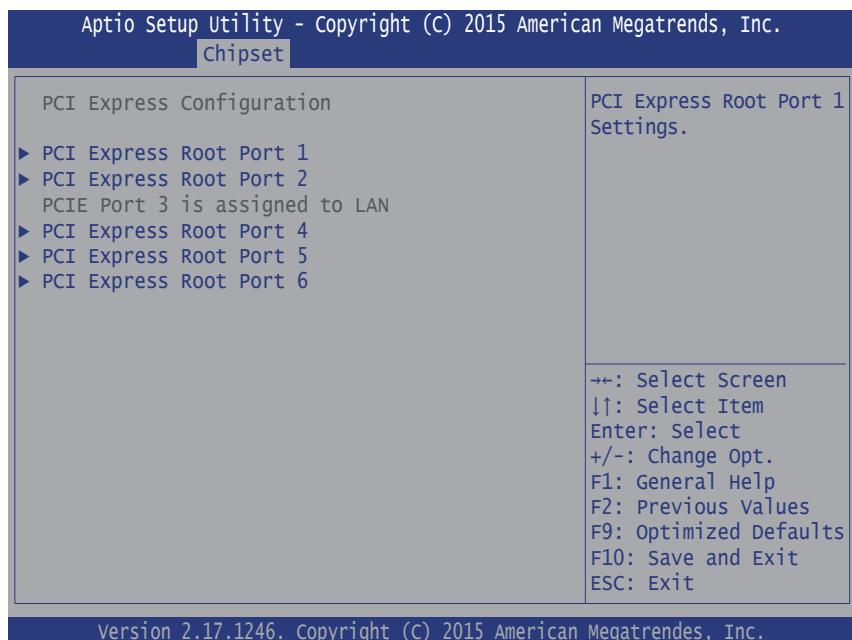


Setting	Description
PCI Express Root Poer 1	
PCI Express Root Poer 2	
PCI Express Root Poer 4	See next page.
PCI Express Root Poer 5	
PCI Express Root Poer 6	

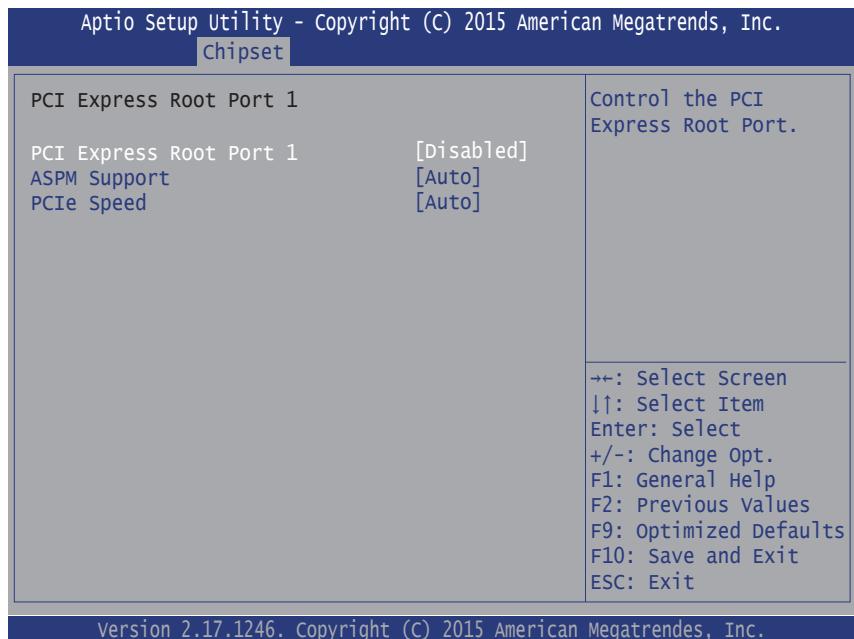**PCI Express Root Port 1/2/4/5/6**

Setting	Description
PCI Express Root Port 1/2/4/5/6	Control the PCI Express Root Port. ► Options: <b>Enabled</b> (default) or <b>Disabled</b>
ASPM Support	Set the ASPM Level: Force L0s - Force all links to L0s State: Auto - BIOS auto configure: DISABLE - Disable ASPM ► Options: <b>Disabled</b> (default), <b>L0s</b> , <b>L1</b> , <b>L0sL1</b> and <b>Auto</b>
PCIe Speed	Select PCI Express port speed. ► Options: <b>Auto</b> (default), <b>Gen1</b> and <b>Gen2</b>


#### 4.3.4 USB Configuration

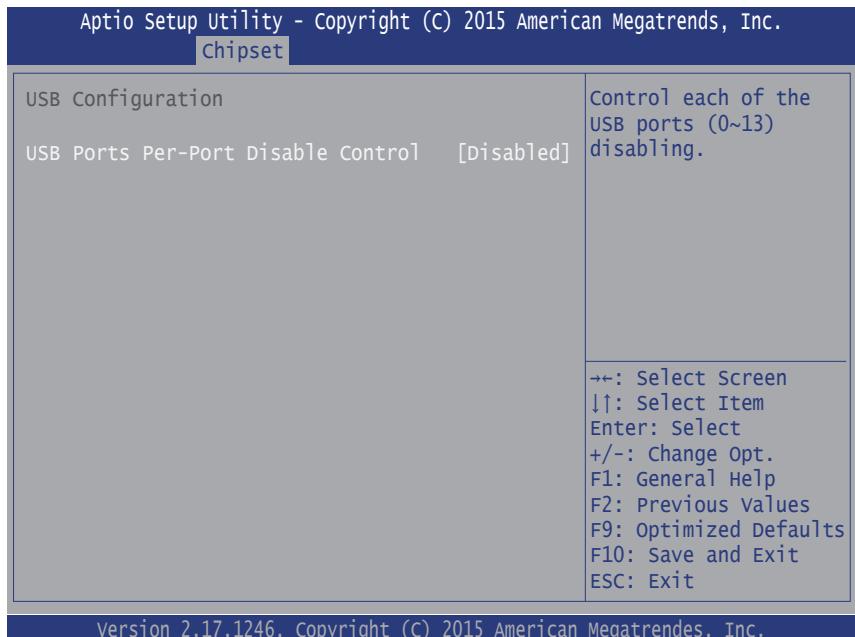

Version 2.17.1246. Copyright (C) 2015 American Megatrends, Inc.

Setting	Description
USB Ports Per-Port Disable Control	Control each of the USB ports (0~7) disabling. ▶ Options: <b>Enabled</b> or <b>Disabled</b> (default)


### 4.3.5 HDAC Configuration

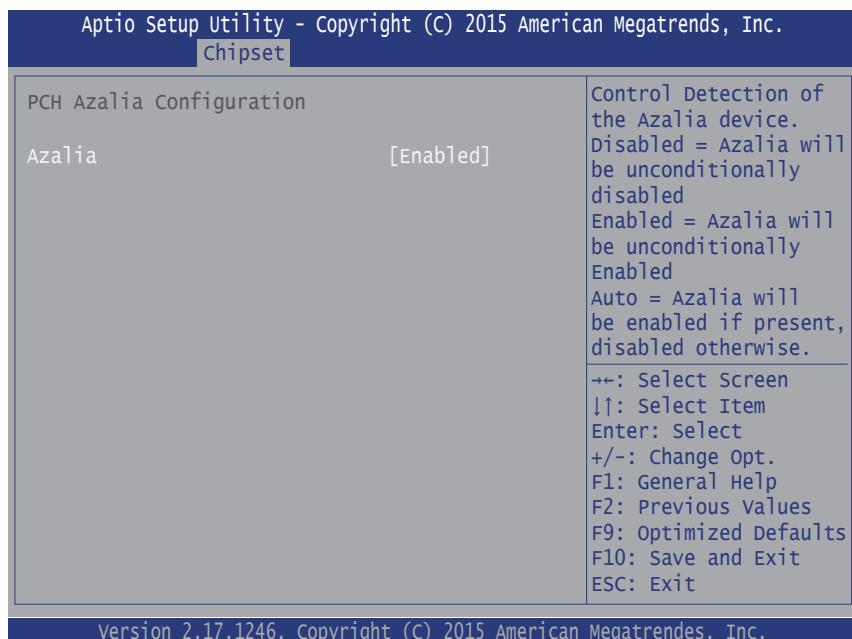

Version 2.17.1246. Copyright (C) 2015 American Megatrendes, Inc.

Setting	Description
Azalia	Control Detection of the Azalia device. <b>Disabled</b> = Azalia will be unconditionally disabled <b>Enabled</b> (default) = Azalia will be unconditionally Enabled <b>Auto</b> = Azalia will be enabled if present, disabled otherwise.

#### 4.3.6 LAN Configuration

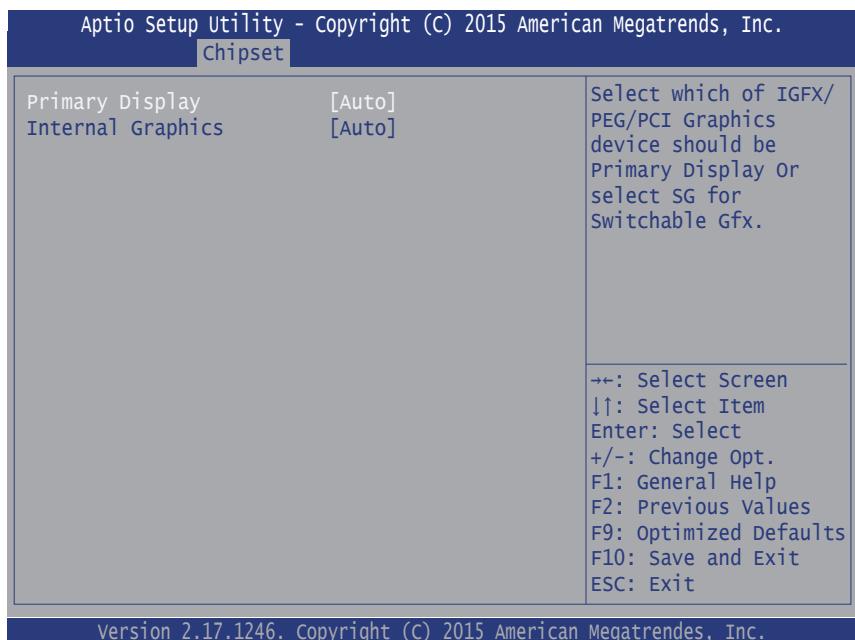


Version 2.17.1246. Copyright (C) 2015 American Megatrendes, Inc.

Setting	Description
PCH LAN Controller	Enables/Disables onboard NIC. ► Options: <b>Enabled</b> (default), and <b>Disabled</b>
Wake on LAN	Enable/Disable (default) integrated LAN to wake the system. ► Options: <b>Enabled</b> (default), and <b>Disabled</b>


## 4.4 Security

The **Security** menu sets up the administrator password.

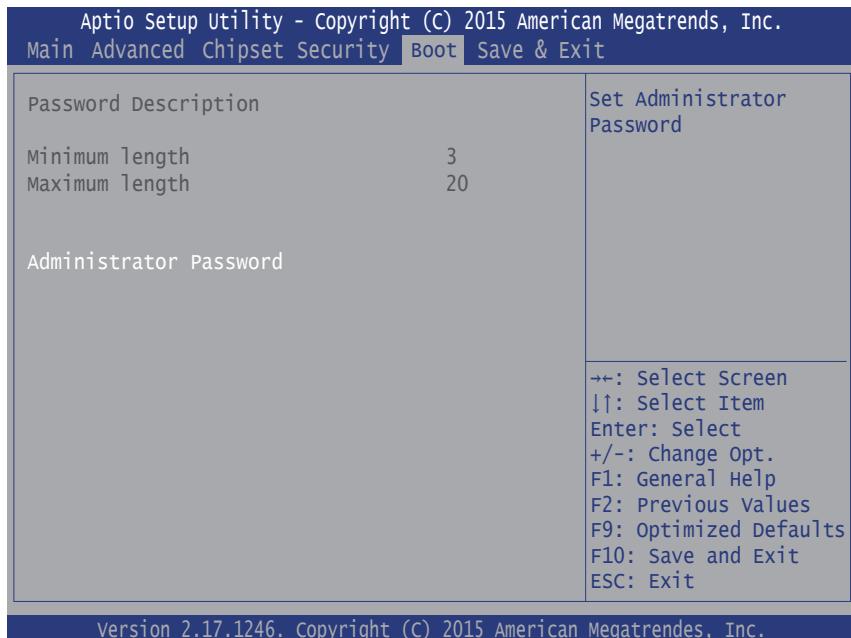


Setting	Description
Administrator Password	To set up an administrator password: 1. Select <b>Administrator Password</b> . The screen then pops up an <b>Create New Password</b> dialog. 2. Enter your desired password that is no less than 3 characters and no more than 20 characters. 3. Hit [Enter] key to submit.

## 4.5 Boot

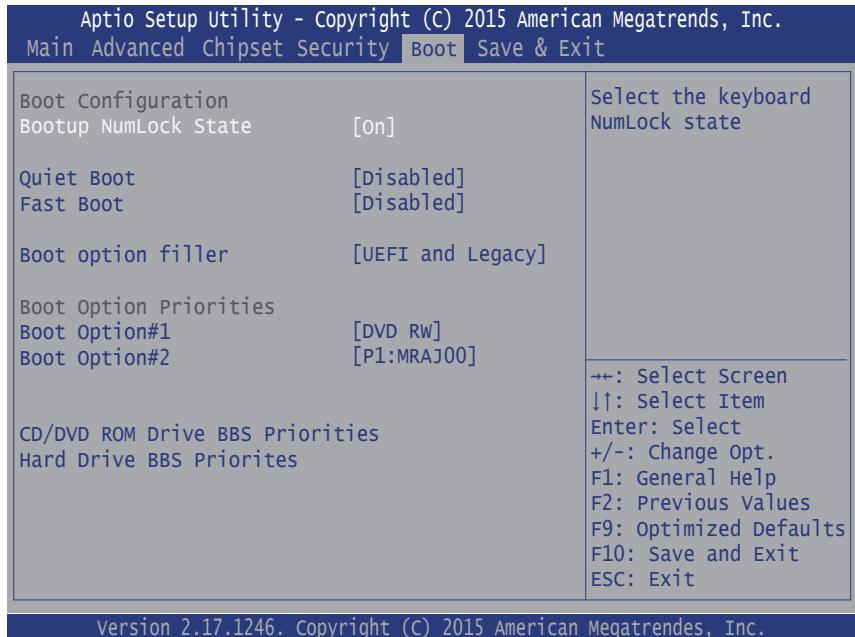

Setting	Description
Boot NumLock State	Select the keyboard NumLock state. ▶ Options: <b>On</b> (default) and <b>Off</b> .
Quiet Boot	<b>Enable</b> (default) or <b>Disable</b> Quiet Boot option.
Fast Boot	<b>Enables</b> (default) or <b>disable</b> initializing only a minimal set of devices required to launch the active boot options when booting up the system.
Boot option filter	This option controls what device system can boot to. ▶ Options: <b>[UEFI and Legacy]</b> (default); <b>[Legacy only]</b> ; and <b>[UEFI only]</b> .
Boot Option Priorities	Sets the boot priority among the available device types.

## 4.6 Save & Exit

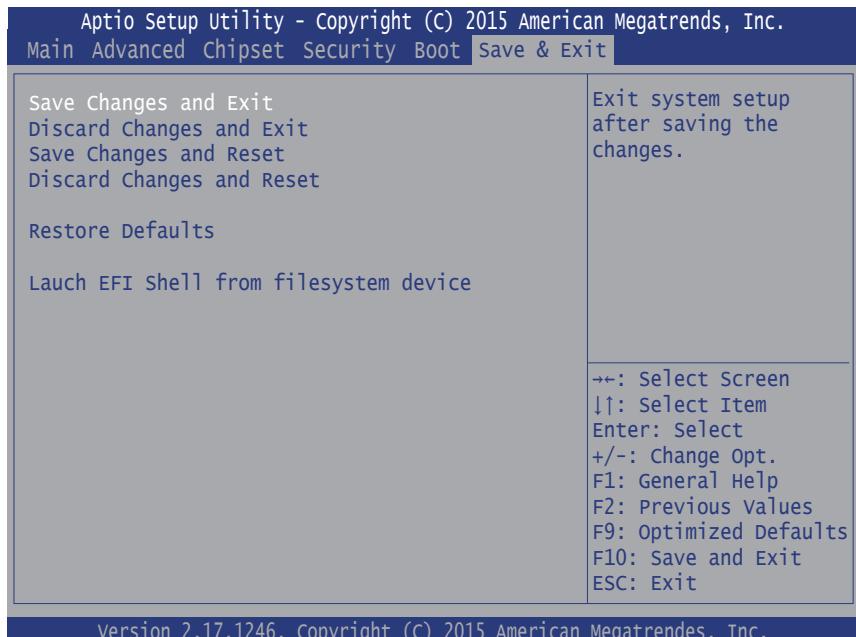

Setting	Description
Save Changes and Exit	Exit system setup after saving the changes. ► Enter the item and then a dialog box pops up: <b>Save configuration and exit? (Yes/ No)</b>
Discard Changes and Exit	Exit system setup without saving the changes. ► Enter the item and then a dialog box pops up: <b>Quit without saving? (Yes/ No)</b>
Restore Defaults	Restore/Load Default values for all the setup options. ► Enter the item and then a dialog box pops up: <b>Load Optimized Defaults? (Yes/ No)</b>
Save Changes and Reset	Reset the system after saving the changes.
Discard Changes and Reset	Discard the changes and reset the system
Launch EFI Shell from filesystem device	Attempts to launch EFI shell application (Shell. efi) from one of the available filesystem devices.

---

This page is intentionally left blank.



# Appendix

## Appendix A: I/O Port Address Map

Each peripheral device in the system is assigned a set of I/O port addresses which also becomes the identity of the device. The following table lists the I/O port addresses used.

Address	Device Description
0x000003F8-0x000003FF	Communications Port (COM1)
0x000002F8-0x000002FF	Communications Port (COM2)
0x00000000-0x0000001F	Direct memory access controller
0x00000081-0x00000091	Direct memory access controller
0x00000093-0x0000009F	Direct memory access controller
0x000000C0-0x000000DF	Direct memory access controller
0x0000F080-0x0000F09F	Ethernet Controller
0x00001854-0x00001857	Motherboard resources
0x00000070-0x00000077	Motherboard resources
0x00000A00-0x00000A1F	Motherboard resources
0x00000A20-0x00000A2F	Motherboard resources
0x00000A30-0x00000A3F	Motherboard resources
0x0000002E-0x0000002F	Motherboard resources
0x0000004E-0x0000004F	Motherboard resources
0x00000061-0x00000061	Motherboard resources
0x00000063-0x00000063	Motherboard resources
0x00000065-0x00000065	Motherboard resources
0x00000067-0x00000067	Motherboard resources
0x00000080-0x00000080	Motherboard resources
0x00000092-0x00000092	Motherboard resources
0x000000B2-0x000000B3	Motherboard resources
0x00000680-0x0000069F	Motherboard resources
0x00001800-0x000018FE	Motherboard resources
0x00000000-0x0000001F	PCI bus
0x00000D00-0x0000FFFF	PCI bus
0x00000378-0x0000037F	Printer Port (LPT1)
0x00000020-0x00000021	Programmable interrupt controller

0x00000024-0x00000025	Programmable interrupt controller
0x00000028-0x00000029	Programmable interrupt controller
0x0000002C-0x0000002D	Programmable interrupt controller
0x00000030-0x00000031	Programmable interrupt controller
0x00000034-0x00000035	Programmable interrupt controller
0x00000038-0x00000039	Programmable interrupt controller
0x0000003C-0x0000003D	Programmable interrupt controller
0x000000A0-0x000000A1	Programmable interrupt controller
0x000000A4-0x000000A5	Programmable interrupt controller
0x000000A8-0x000000A9	Programmable interrupt controller
0x000000AC-0x000000AD	Programmable interrupt controller
0x000000B0-0x000000B1	Programmable interrupt controller
0x000000B4-0x000000B5	Programmable interrupt controller
0x000000B8-0x000000B9	Programmable interrupt controller
0x000000BC-0x000000BD	Programmable interrupt controller
0x000000D0-0x000000D1	Programmable interrupt controller
0x0000F040-0x0000F05F	SM Bus Controller
0x0000F0D0-0x0000F0D7	Standard AHCI 1.0 Serial ATA Controller
0x0000F0C0-0x0000F0C3	Standard AHCI 1.0 Serial ATA Controller
0x0000F0B0-0x0000F0B7	Standard AHCI 1.0 Serial ATA Controller
0x0000F0A0-0x0000F0A3	Standard AHCI 1.0 Serial ATA Controller
0x0000F060-0x0000F07F	Standard AHCI 1.0 Serial ATA Controller
0x0000F000-0x0000F03F	Standard VGA Graphics Adapter
0x000003B0-0x000003BB	Standard VGA Graphics Adapter
0x000003C0-0x000003DF	Standard VGA Graphics Adapter
0x00000070-0x00000077	System CMOS/real time clock
0x00000040-0x00000043	System timer
0x00000050-0x00000053	System timer

## Appendix B: BIOS Memory Mapping

Address	Device Description
0x000003F8-0x000003FF	Communications Port (COM1)
0x000002F8-0x000002FF	Communications Port (COM2)
0x00000000-0x0000001F	Direct memory access controller
0x00000081-0x00000091	Direct memory access controller
0x00000093-0x0000009F	Direct memory access controller
0x000000C0-0x000000DF	Direct memory access controller
0x0000F080-0x0000F09F	Ethernet Controller
0x00001854-0x00001857	Motherboard resources
0x00000070-0x00000077	Motherboard resources
0x00000A00-0x00000A1F	Motherboard resources
0x00000A20-0x00000A2F	Motherboard resources
0x00000A30-0x00000A3F	Motherboard resources
0x0000002E-0x0000002F	Motherboard resources
0x0000004E-0x0000004F	Motherboard resources
0x00000061-0x00000061	Motherboard resources
0x00000063-0x00000063	Motherboard resources
0x00000065-0x00000065	Motherboard resources
0x00000067-0x00000067	Motherboard resources
0x00000080-0x00000080	Motherboard resources
0x00000092-0x00000092	Motherboard resources
0x000000B2-0x000000B3	Motherboard resources
0x00000680-0x0000069F	Motherboard resources
0x00001800-0x000018FE	Motherboard resources
0x00000000-0x0000001F	PCI bus
0x00000D00-0x0000FFFF	PCI bus
0x00000378-0x0000037F	Printer Port (LPT1)
0x00000020-0x00000021	Programmable interrupt controller
0x00000024-0x00000025	Programmable interrupt controller
0x00000028-0x00000029	Programmable interrupt controller

0x00000002C-0x0000002D	Programmable interrupt controller
0x00000030-0x00000031	Programmable interrupt controller
0x00000034-0x00000035	Programmable interrupt controller
0x00000038-0x00000039	Programmable interrupt controller
0x0000003C-0x0000003D	Programmable interrupt controller
0x000000A0-0x000000A1	Programmable interrupt controller
0x000000A4-0x000000A5	Programmable interrupt controller
0x000000A8-0x000000A9	Programmable interrupt controller
0x000000AC-0x000000AD	Programmable interrupt controller
0x000000B0-0x000000B1	Programmable interrupt controller
0x000000B4-0x000000B5	Programmable interrupt controller
0x000000B8-0x000000B9	Programmable interrupt controller
0x000000BC-0x000000BD	Programmable interrupt controller
0x0000004D0-0x000004D1	Programmable interrupt controller
0x0000F040-0x0000F05F	SM Bus Controller
0x0000F0D0-0x0000F0D7	Standard AHCI 1.0 Serial ATA Controller
0x0000F0C0-0x0000F0C3	Standard AHCI 1.0 Serial ATA Controller
0x0000F0B0-0x0000F0B7	Standard AHCI 1.0 Serial ATA Controller
0x0000F0A0-0x0000F0A3	Standard AHCI 1.0 Serial ATA Controller
0x0000F060-0x0000F07F	Standard AHCI 1.0 Serial ATA Controller
0x0000F000-0x0000F03F	Standard VGA Graphics Adapter
0x000003B0-0x000003BB	Standard VGA Graphics Adapter
0x000003C0-0x000003DF	Standard VGA Graphics Adapter
0x00000070-0x00000077	System CMOS/real time clock
0x00000040-0x00000043	System timer
0x00000050-0x00000053	System timer

## Appendix C: Interrupt Request Lines (IRQ)

Peripheral devices use interrupt request lines to notify CPU for the service required. The following table shows the IRQ used by the devices on board.

Level	Function
IRQ0	System timer
IRQ3	Communications Port (COM2)
IRQ4	Communications Port (COM1)
IRQ8	System CMOS/real time clock
IRQ10	Ethernet Controller
IRQ11	PCI Simple Communications Controller
IRQ11	SM Bus Controller
IRQ11	Universal Serial Bus (USB) Controller
IRQ11	Base System Device
IRQ16	PCI Express standard Upstream Switch Port
IRQ16	High Definition Audio Controller
IRQ19	Standard AHCI 1.0 Serial ATA Controller
IRQ22	High Definition Audio Controller
IRQ23	Standard Enhanced PCI to USB Host Controller
IRQ81~190	Microsoft ACPI-Compliant System
IRQ4294967289	PCI Express standard Downstream Switch Port
IRQ4294967290	PCI Express standard Downstream Switch Port
IRQ4294967291	PCI Express standard Downstream Switch Port
IRQ4294967292	PCI Express standard Downstream Switch Port
IRQ4294967293	PCI Express standard Root Port
IRQ4294967294	PCI Express standard Root Port
IRQ4294967292	PCI Express standard Downstream Switch Port
IRQ4294967293	PCI Express standard Root Port
IRQ4294967294	PCI Express standard Root Port

## Appendix D: Watchdog Timer (WDT) Setting

WDT is widely used for industry application to monitor the activity of CPU. Application software depends on its requirement to trigger WDT with adequate timer setting. Before WDT time out, the functional normal system will reload the WDT. The WDT never time out for a normal system. The WDT will not be reloaded by an abnormal system, then WDT will time out and reset the system automatically to avoid abnormal operation.

This board supports 255 levels watchdog timer by software programming I/O ports. Below are the source codes written in C, please take them as WDT application example.

```
#include "math.h"
#include "stdio.h"
#include "dos.h"

#define DELAY_TIME 10

#define _SMBBA 0xF040 /* SMBus Base Address */
#define _SMSA 0x6E /* SMBus Slave Address , 75111R's Add = 6Eh or 9Ch */

unsigned char DIO_Set(unsigned char oMode, unsigned char oData);
unsigned char SMB_Bit_READ(int SMPORT, int DeviceID, int iREG_INDEX);
void SMB_Bit_WRITE(int SMPORT, int DeviceID, int oREG_INDEX, int oREG_DATA);

void main()
{
    WDT_Start(10);

    while(1)
    {
        iCount = WDT_Count();
        printf("\r Counts : %d ",iCount);

        delay(1000);
    }
}

void WDT_Start(int iCount)
{
    int iData;

    /* Configuration and function select Register - Enable WDTOUT2# output */
    iData = SMB_Bit_READ(SMB_PORT_AD,SMB_DEVICE_ADD,0x03);
    iData = iData | 0x03;
    SMB_Bit_WRITE(SMB_PORT_AD,SMB_DEVICE_ADD,0x03,iData);
    delay(DELAY_TIME);

    /* Watchdog Timer Range Register */
    SMB_Bit_WRITE(SMB_PORT_AD,SMB_DEVICE_ADD,0x37,iCount);
```

## Appendix

---

```
delay(DELAY_TIME);

/* Watchdog Timer Control Register */
SMB_Byte_WRITE(SMB_PORT_AD,SMB_DEVICE_ADD,0x36,0x72);
}

int WDT_Count(void)
{
    int iData;

    /* Watchdog Timer Range Register */
    iData = SMB_BYTE_READ(SMB_PORT_AD,SMB_DEVICE_ADD,0x37);

    return iData;
}

void WDT_Clear(int iCount)
{
    /* Watchdog Timer Range Register */
    SMB_BYTE_WRITE(SMB_PORT_AD,SMB_DEVICE_ADD,0x37,iCount);
}

void WDT_Stop(void)
{
    /* Watchdog Timer Control Register */
    SMB_BYTE_WRITE(SMB_PORT_AD,SMB_DEVICE_ADD,0x36,0x52);
}
```

## Appendix E: Digital I/O Setting

Below are the source codes written in C, please take them for Digital I/O application examples. The default I/O address is 6Eh.

```
#include "math.h"
#include "stdio.h"
#include "dos.h"

#define DELAY_TIME 10

#define _SMBBA 0xF040 /* SMBus Base Ad-
dress */
#define _SMBSA 0x6E /* SMBus Slave Ad-
dress , 75111R's Add = 6Eh or 9Ch */

unsigned char DIO_Set(unsigned char oMode, unsigned char oData);
unsigned char SMB_Byte_READ(int SMPORT, int DeviceID, int iREG_INDEX);
void SMB_Byte_WRITE(int SMPORT, int DeviceID, int oREG_INDEX, int oREG_DATA);

void main()
{
    int DataIn;

    SetDIOMode(0x0F);

    SetDIOData(0x0A);
    delay(2000);

    DataIn = GetDIOStatus();
    printf(" Input : %2x \n",DataIn);
    delay(2000);

    SetDIOData(0x05);
    delay(2000);

    DataIn = GetDIOStatus();
    printf(" Input : %2x \n",DataIn);
    delay(2000);
}

void SetDIOMode(int iMode)
{
    /* DIO0 ~ DIO7 Mode */
    SMB_Byte_WRITE(SMB_PORT_AD,SMB_DEVICE_ADD,0x20,iMode);
}

void SetDIOData(int iData)
{
    /* DIO0 ~ DIO7 Data */
    SMB_Byte_WRITE(SMB_PORT_AD,SMB_DEVICE_ADD,0x21,iData);
}

int GetDIOStatus()
{
    int iStatus;
```

## Appendix

---

```
/* DIO0 ~ DIO7 Status */
iStatus = SMB_Byte_READ(SMB_PORT_AD, SMB_DEVICE_ADD, 0x22);

return iStatus;
}
```